




HELMLINK

BLUETOOTH COMMUNICATION SYSTEM

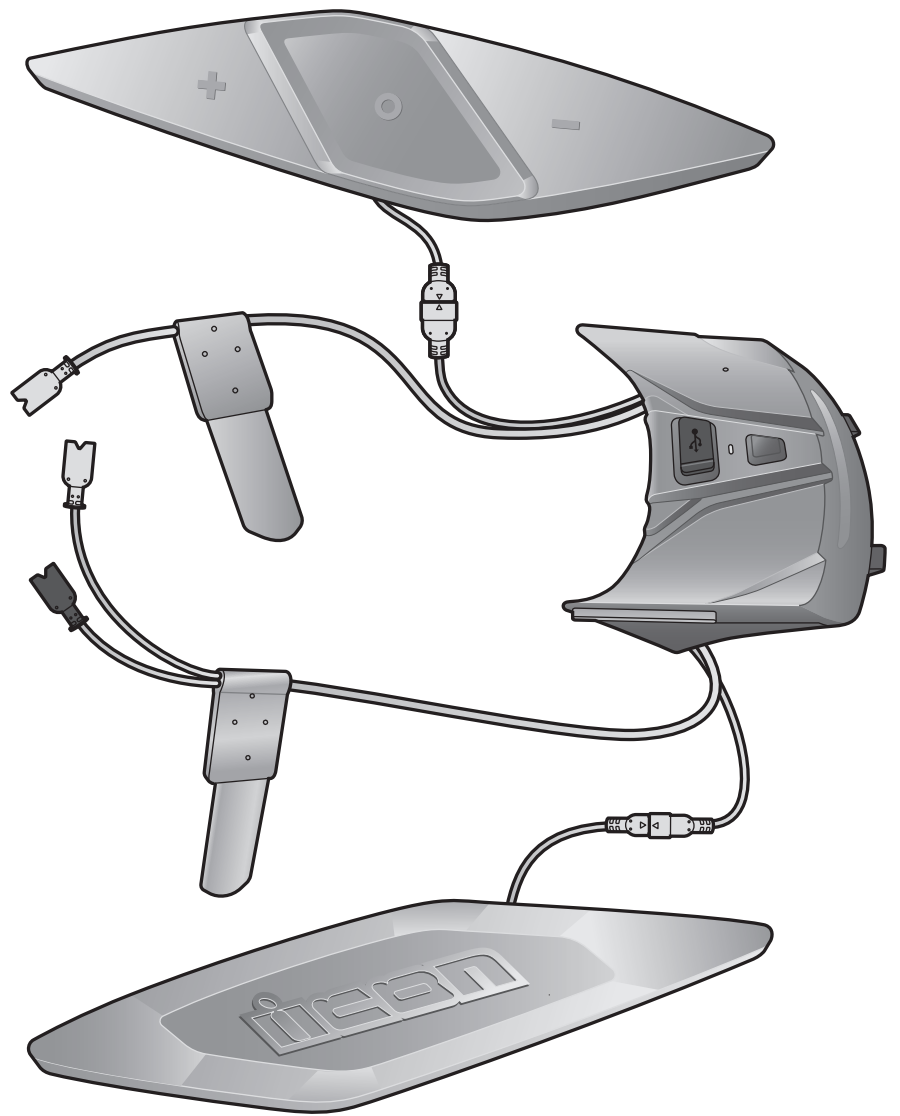

USER'S GUIDE

Version 1.1.0

ENGLISH

TABLE OF CONTENTS

1.	ABOUT THE HELMLINK	7
1.1	Key Features	7
1.2	Product Details	8
1.3	Package Contents	9
2.	INSTALLING THE HEADSET ON YOUR HELMET	10
2.1	Preparing the Helmet for Installation	10
2.2	Preparing the Headset for Installation	11
2.3	Installing the Headset	12
3.	GETTING STARTED	17
3.1	Downloadable Sena Software	17
3.1.1	App	17
3.1.2	Sena Device Manager	17
3.2	Charging	17
3.3	Legend	18
3.4	Powering On and Off	18
3.5	Checking the Battery Level	18
3.6	Volume Adjustment	19
4.	PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES	20
4.1	Phone Pairing	20
4.1.1	Initially Pairing the HelmLink	20
4.1.2	Pairing When the HelmLink is Turned Off	21
4.1.3	Pairing When the HelmLink is Turned On	22

4.2	Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10	22
4.3	Advanced Selective Pairing: Hands-Free or A2DP Stereo	23
4.3.1	Phone Selective Pairing - Hands-Free Profile	23
4.3.2	Media Selective Pairing - A2DP Profile	23
4.4	GPS Pairing	24
5.	MOBILE PHONE USAGE	25
5.1	Making and Answering Calls	25
5.2	Siri and Google Assistant	25
5.3	Speed Dialing	25
5.3.1	Assigning Speed Dial Presets	25
5.3.2	Using Speed Dial Presets	26
6.	STEREO MUSIC	27
6.1	Bluetooth Stereo Music	27
6.2	Music Sharing	27
6.2.1	Bluetooth Intercom Music Sharing	28
6.2.2	Mesh Intercom Music Sharing	28
7.	MESH INTERCOM	29
7.1	What is Mesh Intercom?	29
7.1.1	Open Mesh	29
7.1.2	Group Mesh	30
7.2	Mesh Version Switch	30
7.3	Starting Mesh Intercom	31
7.4	Using the Mesh in Open Mesh	31
7.4.1	Channel Setting (Default: channel 1)	31

7.5	Using Mesh in Group Mesh	32
7.5.1	Creating a Group Mesh	32
7.5.2	Joining an Existing Group Mesh	33
7.6	Enable/Disable Mic (Default: Enable)	34
7.7	Toggling Open Mesh/Group Mesh	34
7.8	Reset Mesh	34
8.	WAVE INTERCOM	35
8.1	Starting Wave Intercom	35
8.2	Switching between Wave Intercom and Mesh Intercom	35
9.	BLUETOOTH INTERCOM	36
9.1	Intercom Pairing	36
9.1.1	Using QR Codes	36
9.1.2	Using the Button	37
9.2	Last-Come, First-Served	37
9.3	Two-Way Intercom	38
9.4	Multi-Way Intercom	39
9.4.1	Starting a Three-Way Intercom Conference	39
9.4.2	Starting a Four-Way Intercom Conference	40
9.4.3	Ending Multi-Way Intercom	40
9.5	Three-Way Conference Phone Call with Intercom Users	41
9.6	Group Intercom	42
9.7	Mesh Intercom Conference with Bluetooth Intercom Participant	42

10. UNIVERSAL INTERCOM	44
10.1 Universal Intercom Pairing	44
10.2 Two-Way Universal Intercom	44
10.3 Multi-Way Universal Intercom	45
10.3.1 Three-Way Universal Intercom	45
10.3.2 Four-Way Universal Intercom	46
10.4 Mesh Intercom Conference with Two-way Universal Intercom Participant	47
11. USING THE FM RADIO	48
11.1 FM Radio On/Off	48
11.2 Seek and Save Radio Stations	48
11.3 Scan and Save Radio Stations	49
11.4 Temporary Station Preset	49
11.5 Navigating Preset Stations	50
12. LED TAILLIGHT	51
12.1 Using the Button	51
12.2 Using the Sena Motorcycles App	51
13. VOICE COMMAND	52
14. FUNCTION PRIORITY AND FIRMWARE UPGRADES	54
14.1 Function Priority	54
14.2 Firmware Upgrades	54

15. CONFIGURATION SETTING

55

15.1 Headset Configuration Menu

55

15.1.1 Delete All Pairings

56

15.1.2 Remote Control Pairing

56

15.2 Software Configuration Setting

56

15.2.1 Language

56

15.2.2 Equalizer (Default: Off)

57

15.2.3 VOX Phone (Default: Enable)

57

15.2.4 VOX Intercom (Default: Disable)

57

15.2.5 VOX Sensitivity (Default: 3)

58

15.2.6 HD Intercom (Default: Enable)

58

15.2.7 HD Voice (Default: Enable)

58

15.2.8 Bluetooth Intercom Audio Multitasking
(Default: Disabled)

59

15.2.9 Intercom-Audio Overlay Sensitivity (Default: 3)

59

15.2.10 Audio Overlay Volume Management
(Default: Disable)

59

15.2.11 Smart Volume Control (Default: Disable)

60

15.2.12 Sidetone (Default: Disable)

60

15.2.13 Voice Prompt (Default: Enable)

60

15.2.14 RDS AF Setting (Default: Disable)

60

15.2.15 FM Station Guide (Default: Enable)

60

15.2.16 Advanced Noise Control™ (Default: Enable)

60

15.2.17 Region Selection

61

16. TROUBLESHOOTING

62

16.1 Fault Reset

62

16.2 Factory Reset


62

1. ABOUT THE HELMLINK


1.1 Key Features

- Bluetooth® 5.0
- Mesh Intercom™ 3.0 - delivers improved sound quality, a more robust connection, and extended talk time
- Dual version Mesh - Mesh 2.0 for backward compatibility
- Wave Intercom™ Compatible
- Intercom up to 2 km (1.2 mi)*
- Audio Multitasking™
- Multi-Language Voice Command
- Support Siri and Google Assistant


1.2 Product Details

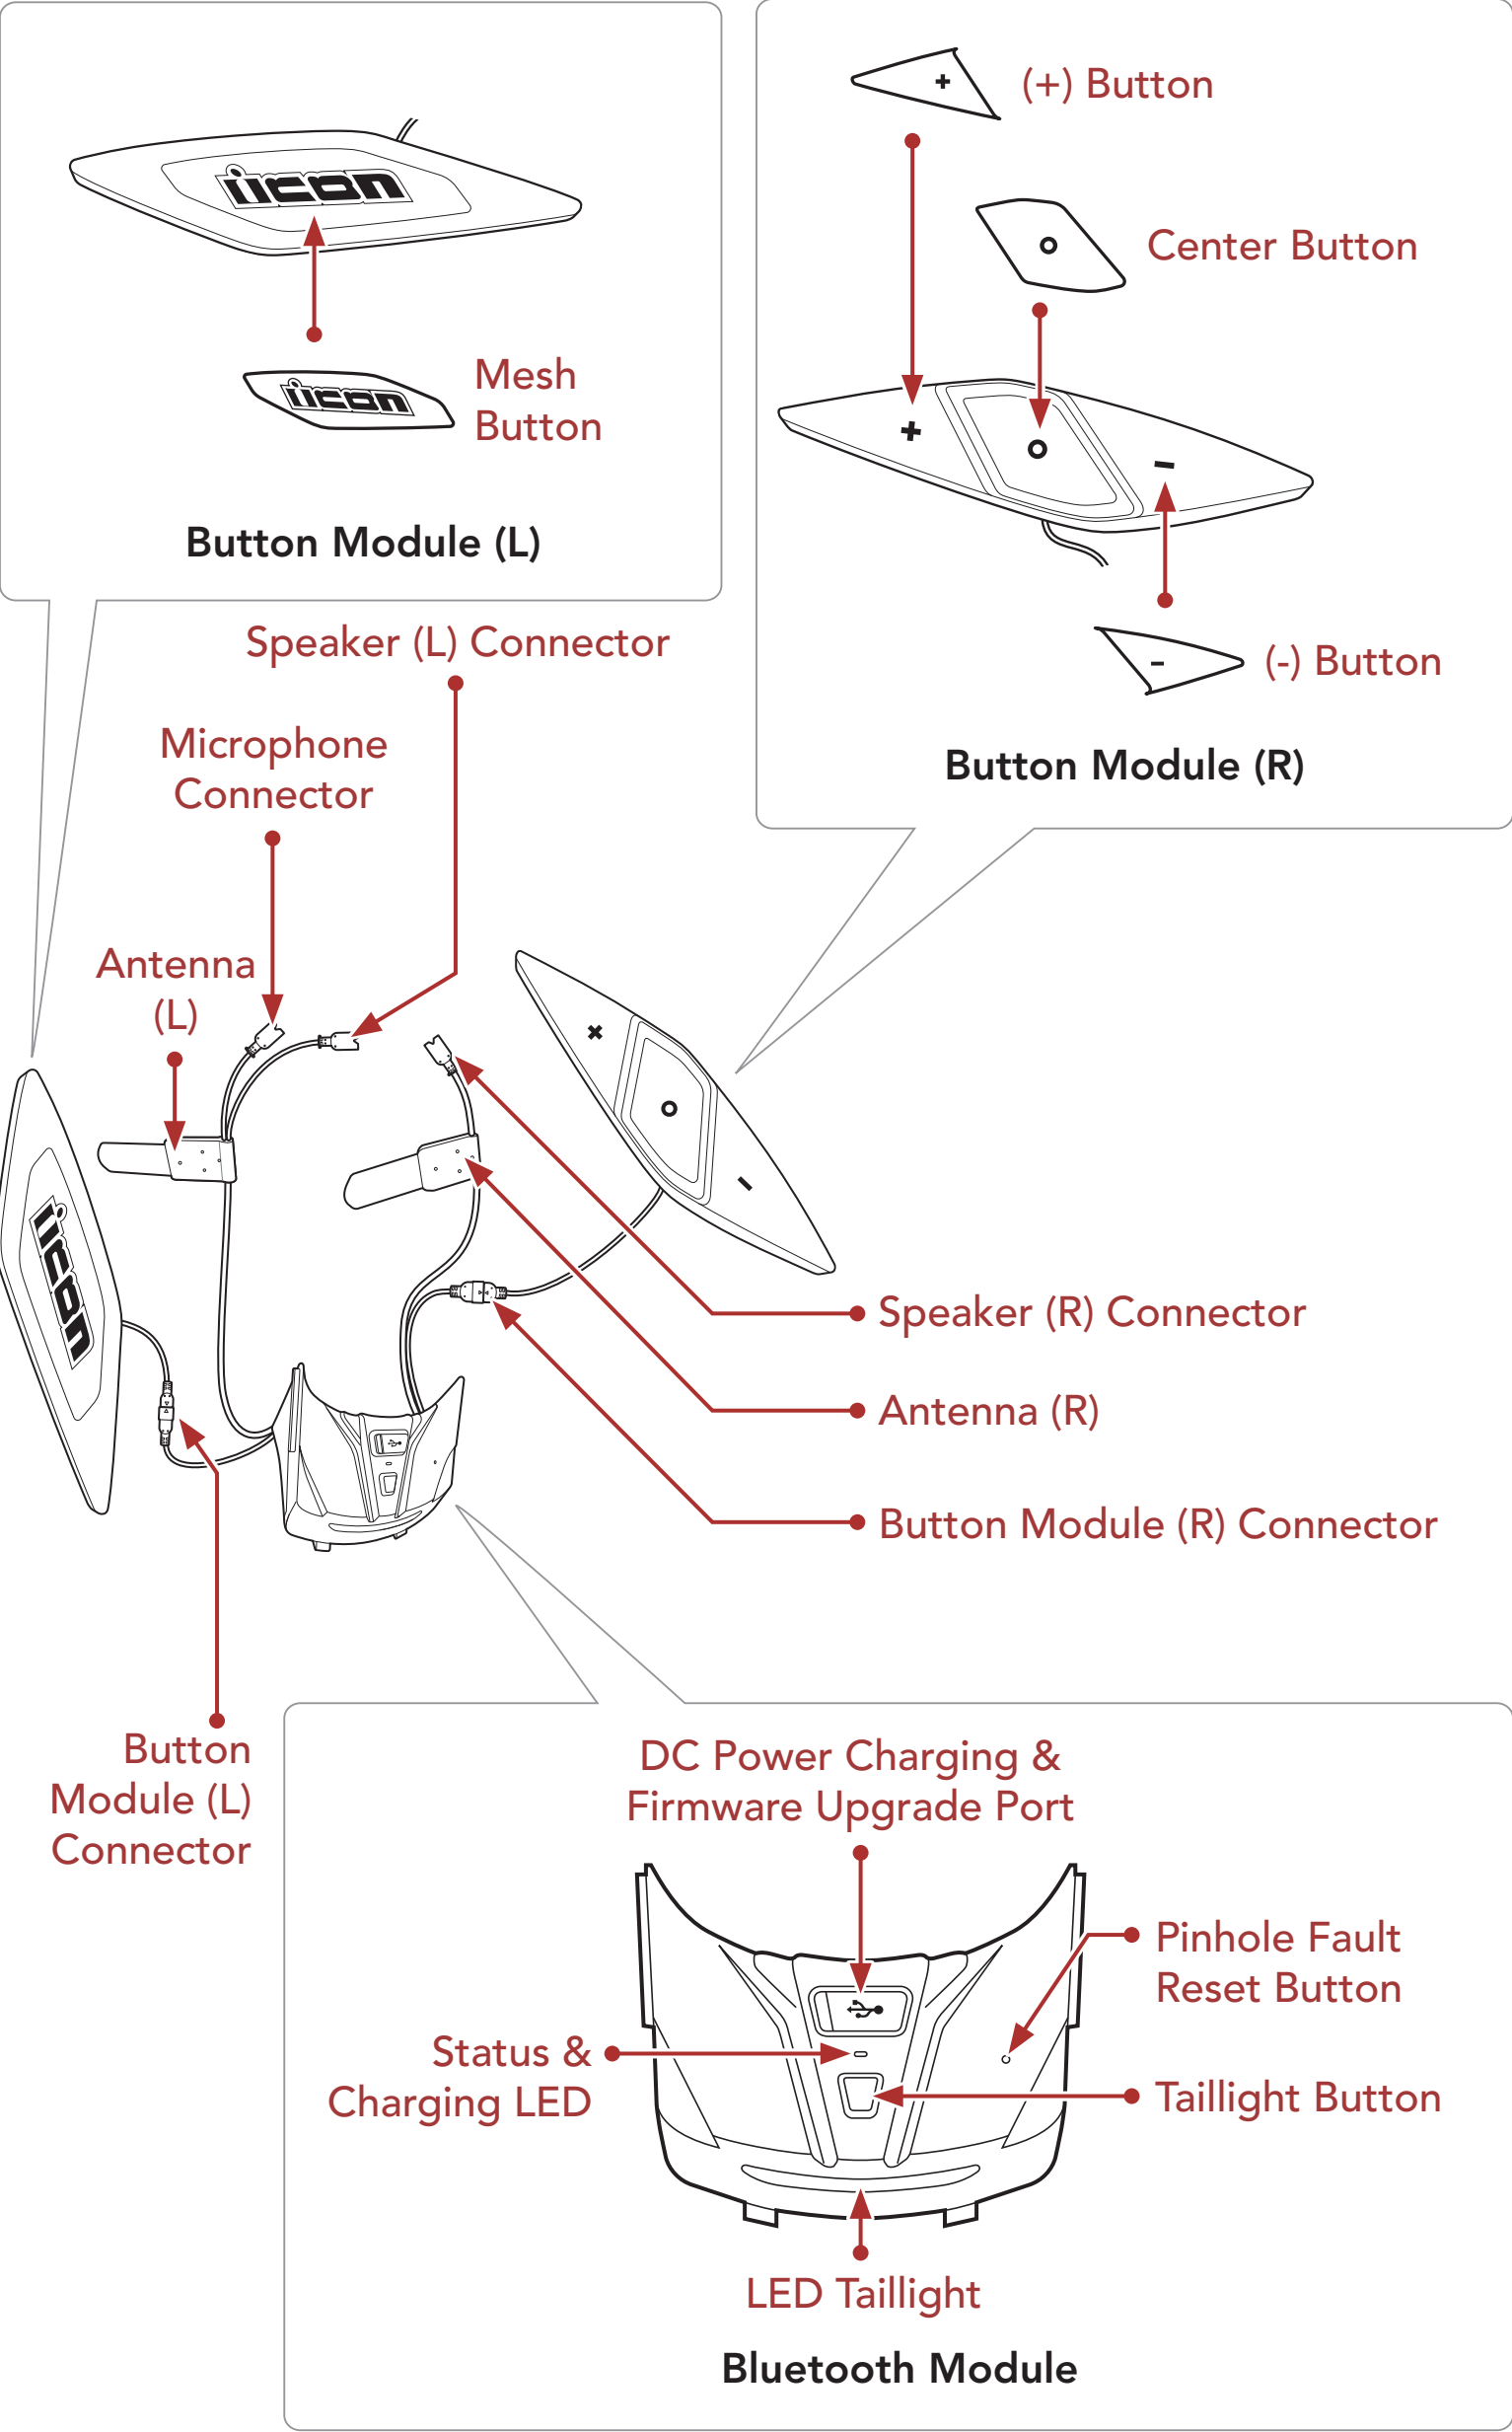

1.3 Package Contents

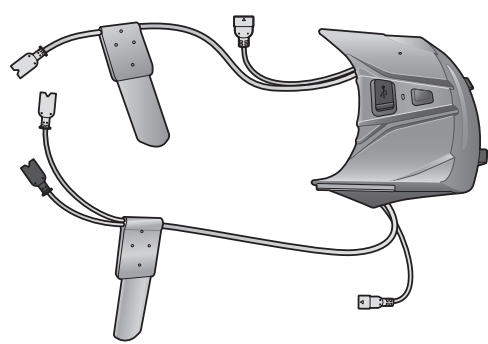


HelmLink

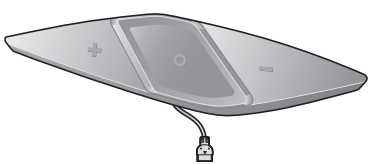


Button Module (R)



 
Button Module (L)




Boom Microphone

 

Hook and Loop Fastener for Boom Microphone

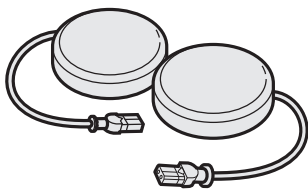


Speakers

 


Hook and Loop Fasteners for Speakers



 Microphone Sponges for Boom Microphone



Screws

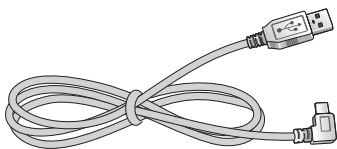

USB Power & Data Cable (USB-C)




Allen Wrench


2. INSTALLING THE HEADSET ON YOUR HELMET

2.1 Preparing the Helmet for Installation


1. Detach the snap fasteners located on the center pad and cheek pads. Then, remove the pads from the helmet.

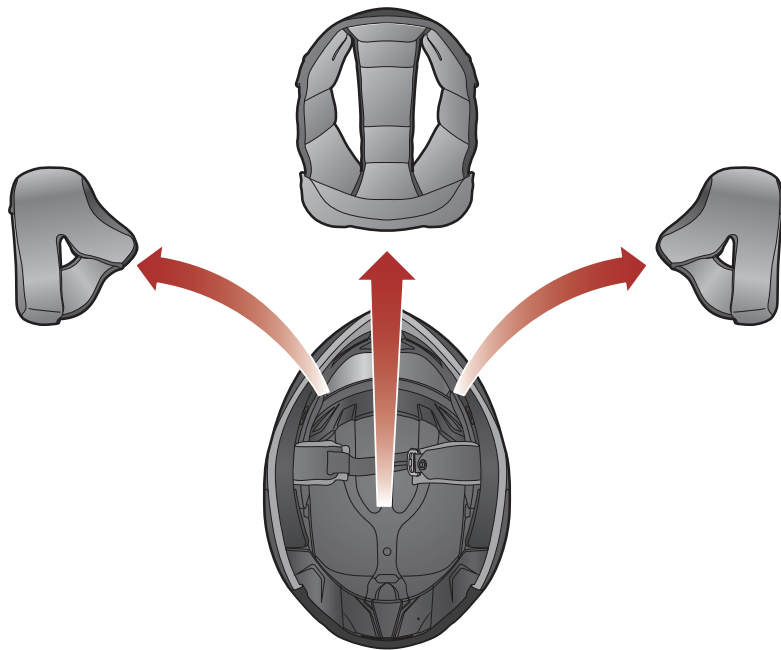

2. Loosen the screw inside helmet using the included Allen wrench.

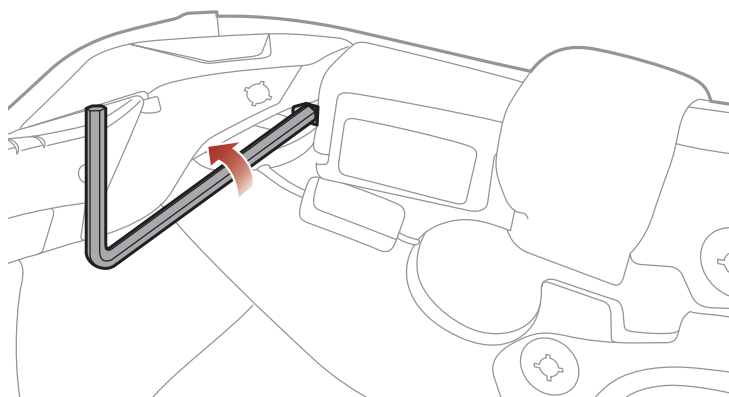


3. Insert the Allen wrench into the screw hole and push the left cover to remove it.

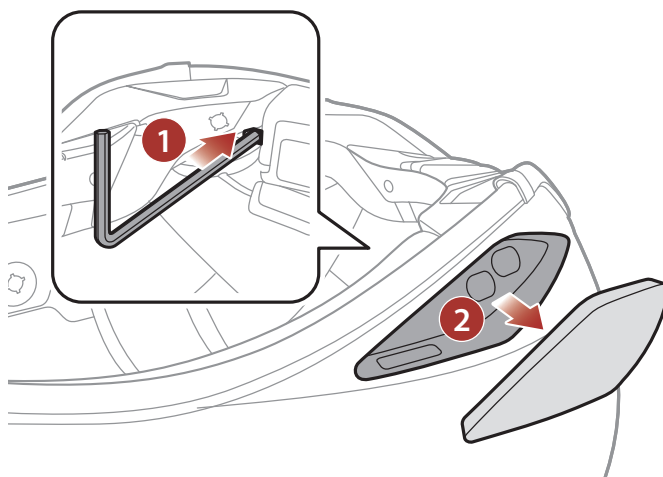


4. Repeat the process on the other side to remove the right cover.

5. Push the tab on the rear cover, and remove the rear cover by pulling it upward.

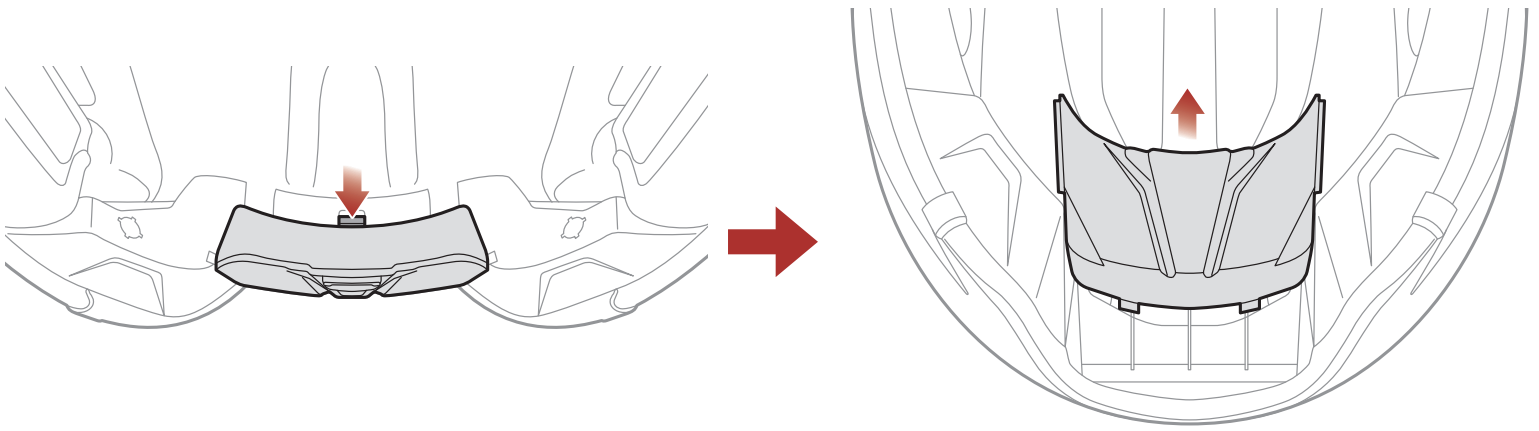


2.2 Preparing the Headset for Installation

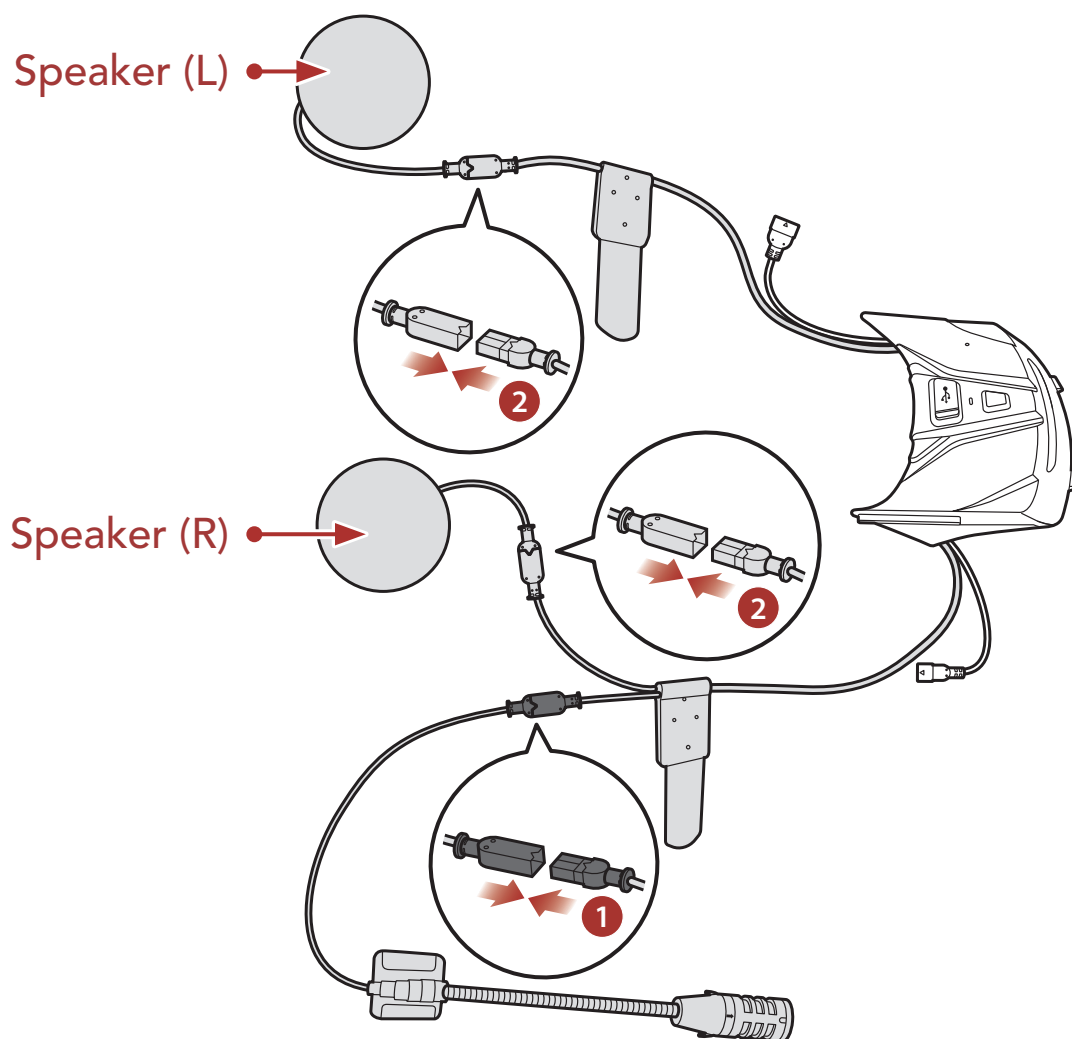


1. Align the arrows on the **Bluetooth Module's microphone connector cable** and microphone cables, and insert the microphone cable into the microphone connector.
2. Align the arrows on the **main unit's speaker connector cables** and speaker cables, and insert the speaker cables into each speaker connector.

2.3 Installing the Headset


1. Put the **Button Module (L)'s connector cable** into the hole first, and install the Button Module (L) as shown in the illustration.

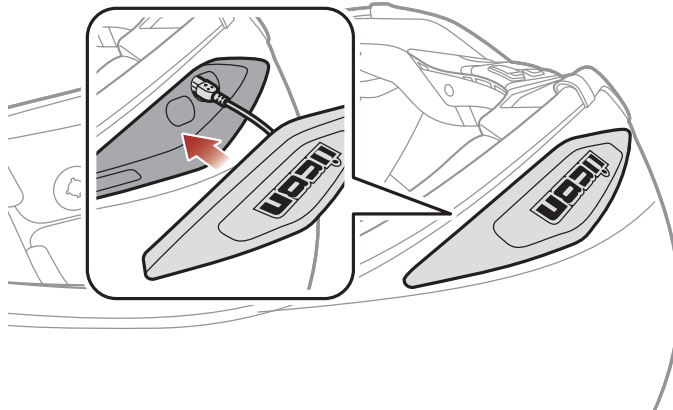


2. Tighten the screw until the Button Module (L) unit is fastened firmly to the helmet.

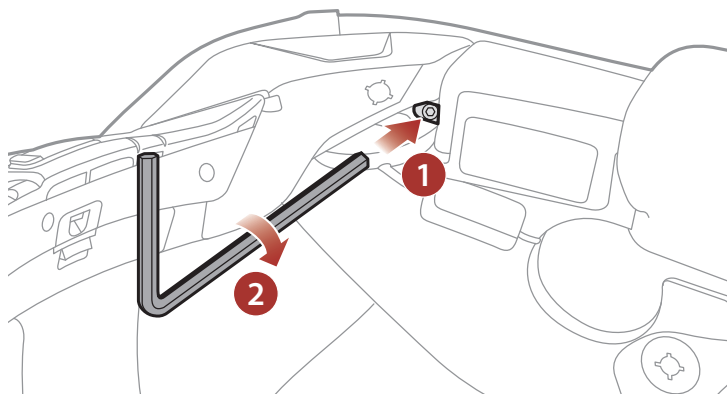


3. Repeat the two processes on the other side.

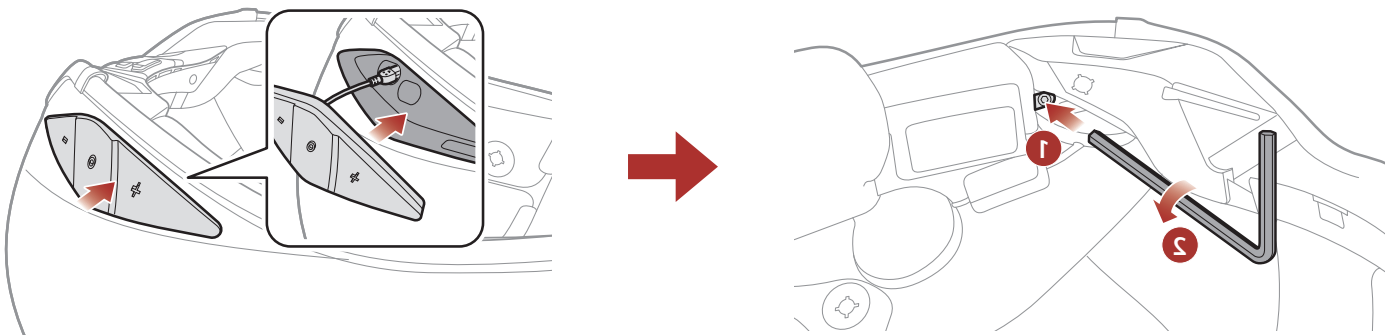


4. Facing the USB port on the Bluetooth Module toward the rear of the helmet, push the module into the corresponding slot until you hear a click.

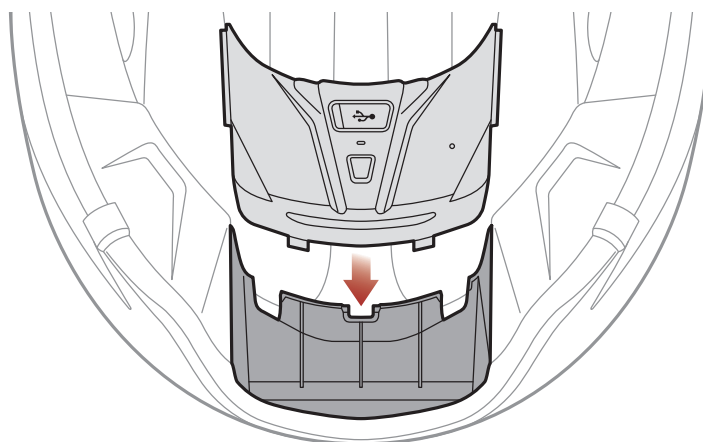


5. Align the arrows on the **Bluetooth Module's connector** and **Button Module (R)'s connector cable**, and insert the **Button Module (R)'s connector cable** into the **Bluetooth Module's connector**.

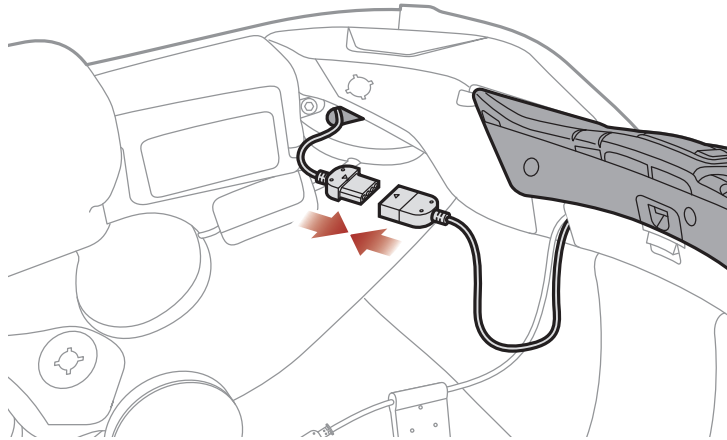


6. Align the arrows on the **Bluetooth Module's connector** and **Button Module (L)'s connector cable**, and insert the **Button Module (L)'s connector cable** into the **Bluetooth Module's connector**.

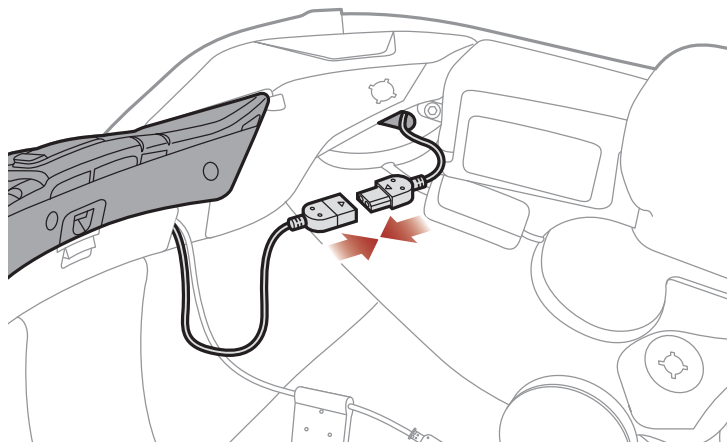


7. Peel off the cover of the hook and loop fastener for the **speaker (R)** and the speaker pad to expose the adhesive surface. Then, attach the fastener to the ear pocket inside the helmet.

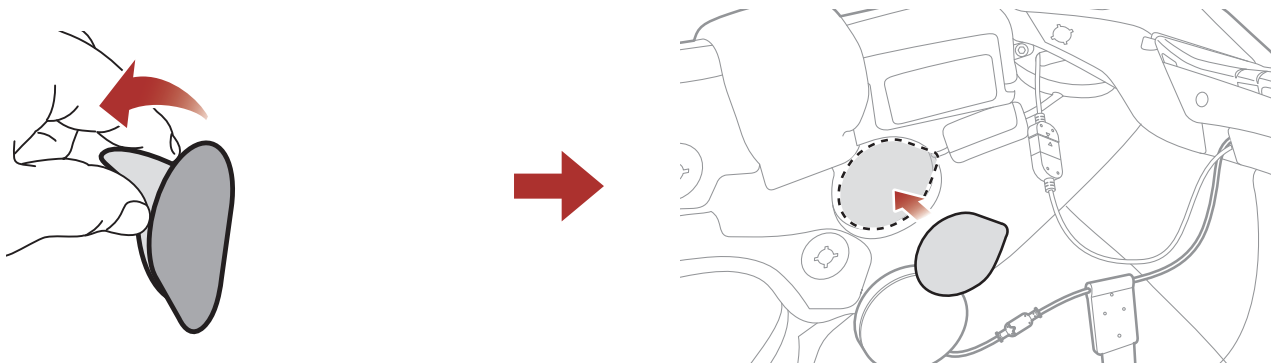


8. Attach the **speaker (R)** and the speaker pad to the hook and loop fastener used for the speaker inside the helmet.

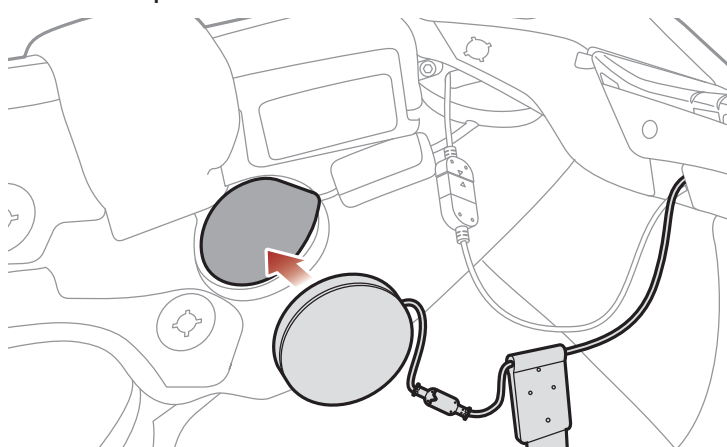


9. After putting the **Antenna (R)** into the hole, put the speaker's connector and cable into the same hole as shown in the illustration.

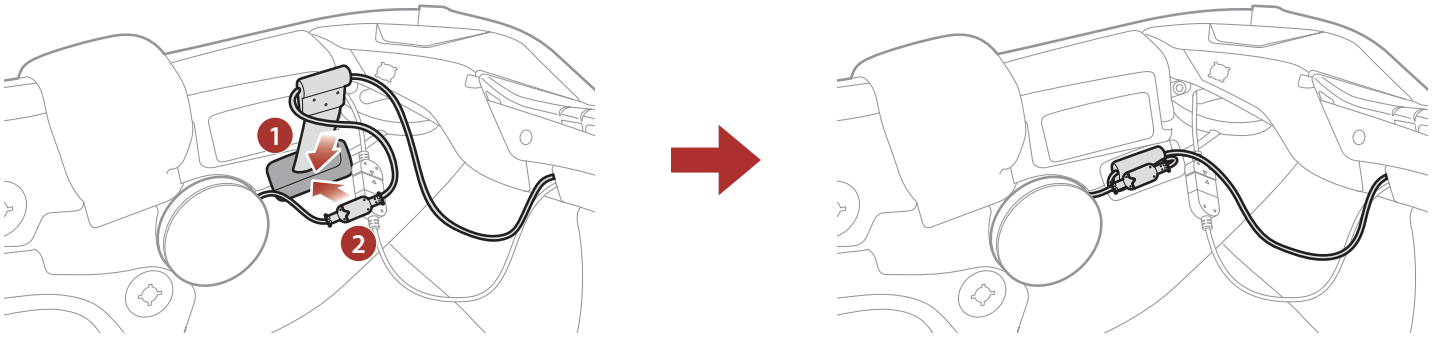


10. Put the **Button Module (R)'s connector** into the cavity of the helmet. Then, put the remains of the cables into the crack in the helmet, and organize the cables.

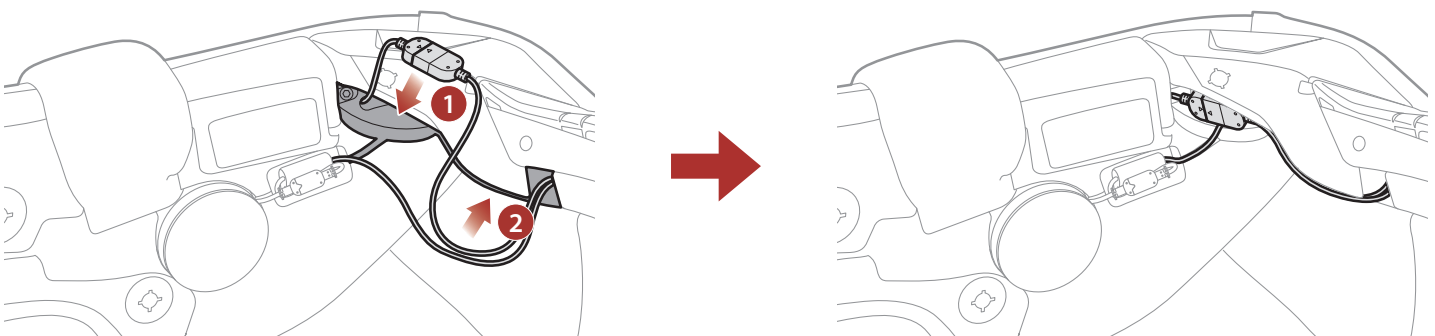


11. Peel off the cover of the hook and loop fastener for the Boom Microphone to expose the adhesive tape. Then, attach the hook and loop fastener to the grooves in the inner shell of the helmet.

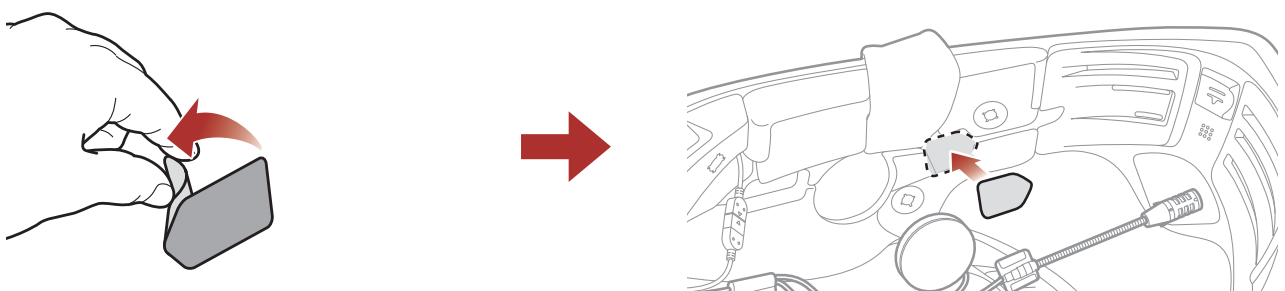

12. Attach the Boom Microphone's mounting plate to the hook and loop fastener.

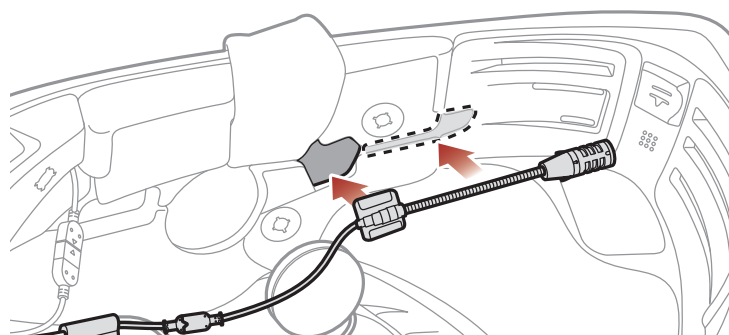


13. Peel off the cover of the hook and loop fastener for the **speaker (L)** and the speaker pad to expose the adhesive surface. Then, attach the fastener to the ear pocket inside the helmet.

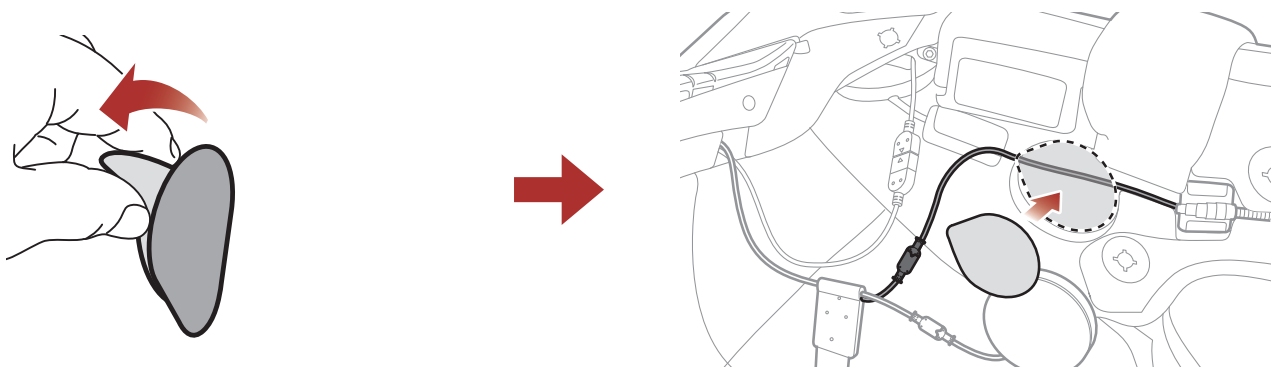


Note: Make sure the fastener covers the microphone's cable in the ear pocket before you attach it to the ear pocket as shown in the illustration.


14. Attach the **speaker (L)** and the speaker pad to the hook and loop fastener used for the speaker inside the helmet.

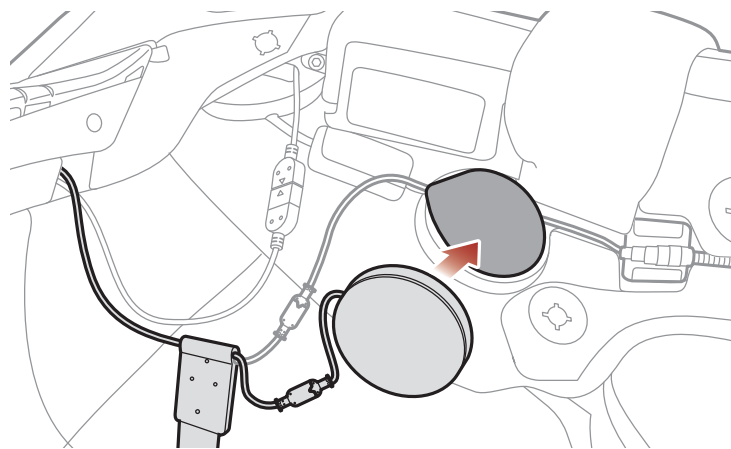


15. After putting the **Antenna (L)** into the hole, put the speaker's connector and cable into the same hole as shown in the illustration.

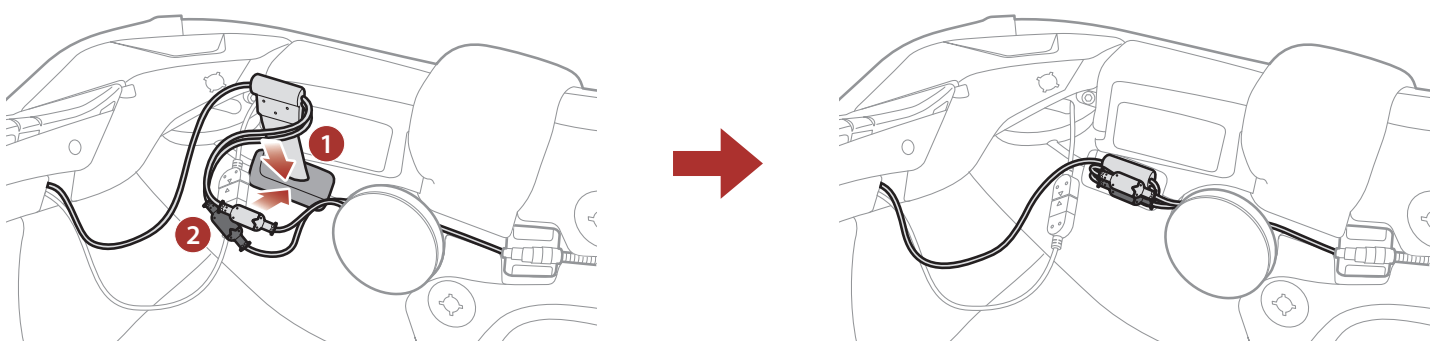


16. Put the **Button Module (L)'s connector** into the cavity of the helmet. Then, put the remains of the cables into the crack in the helmet, and organize the cables.

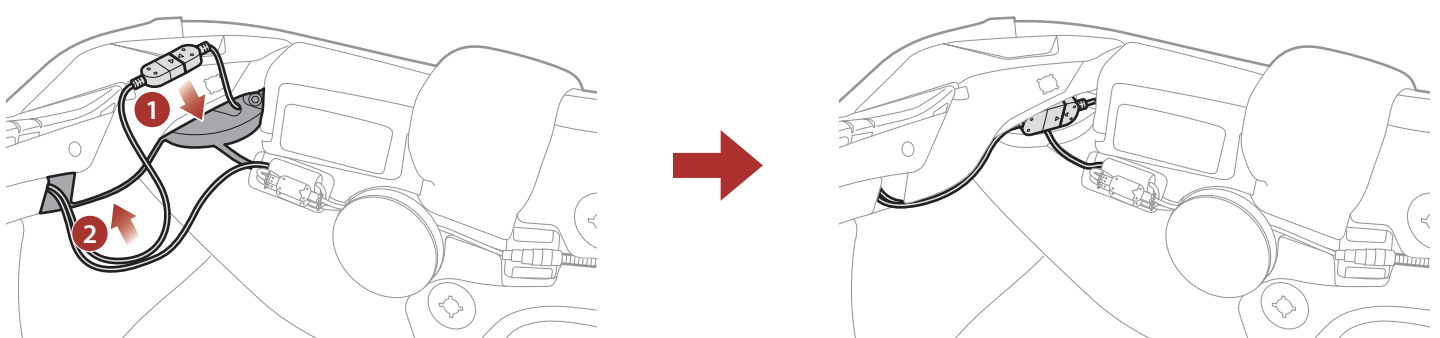

17. Reattach the center pad and cheek pads starting from the rear and click the snap fasteners.

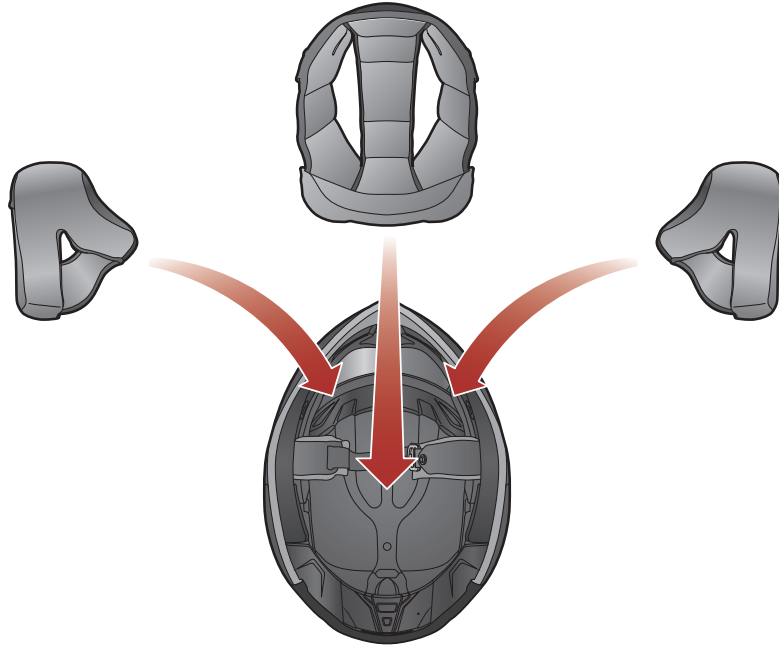

18. Make sure that the **Boom Microphone** is located properly close to your mouth when you wear the helmet.

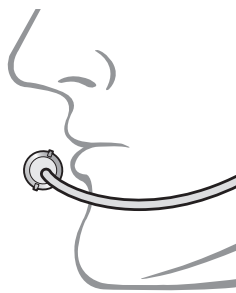

3. GETTING STARTED


3.1 Downloadable Sena Software

3.1.1 App

Sena Motorcycles App



WAVE Intercom App

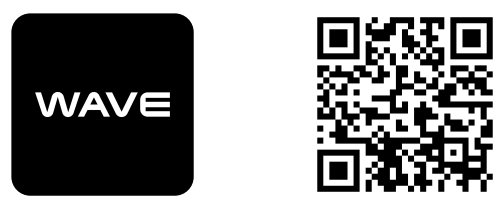

Download the **Sena Motorcycles App** or **WAVE Intercom App** from the **Google Play Store** or the **App Store**. For detailed information on the **Wave Intercom**, find the **Wave Intercom User Guide** from [sena.com](https://www.sena.com).

3.1.2 Sena Device Manager


The **Sena Device Manager** allows you to upgrade firmware and configure settings directly from your PC.



- Download the **Sena Device Manager** at oem.sena.com/icon.

3.2 Charging

Charging the headset

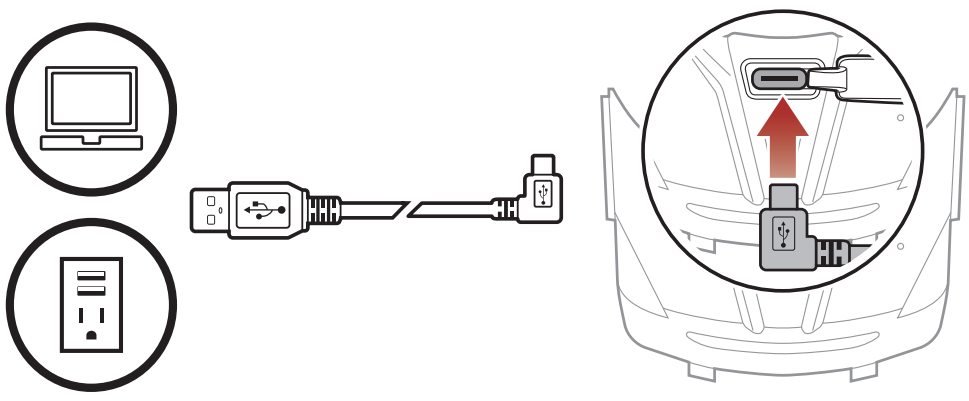

Depending upon the charging method, the headset will be fully charged in about 2.5 hours.

Note:

- Any 3rd party USB charger can be used with ICON products if the charger is approved by either the FCC, CE, IC, or other locally approved agencies.
- Use of a non-approved charger may cause fire, explosion, leakage, and other hazards which may also reduce the life time or performance of the battery.
- The **headset** is compatible with 5 V input USB-charged devices only.

3.3 Legend



Tap button the specified number of times



Press and Hold button for the specified amount of time




“Hello”


Audible prompt

3.4 Powering On and Off

Powering On

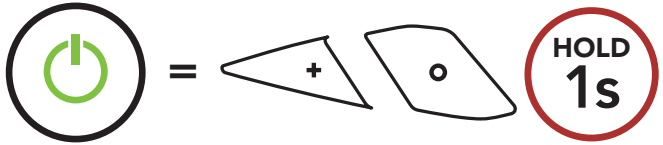


Powering Off

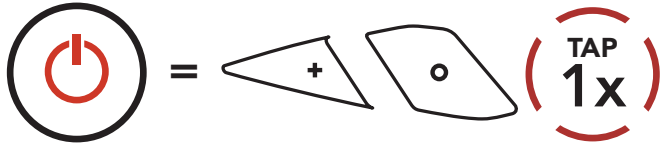


3.5 Checking the Battery Level

Instructions are for when powering the headset on.

Powering On

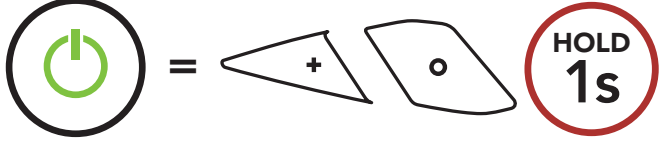

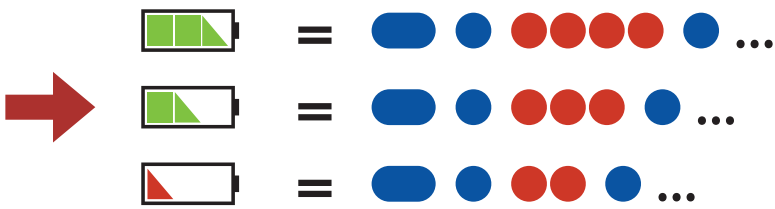


Note: When the battery is low while in use, you will hear a voice prompt saying **“Low battery”**.


3.6 Volume Adjustment

You can raise or lower the volume by tapping the **(+) Button** or the **(-) Button**. Volume is set and maintained independently at different levels for each audio source (i.e., phone, intercom), even when the headset is rebooted.

Volume Up

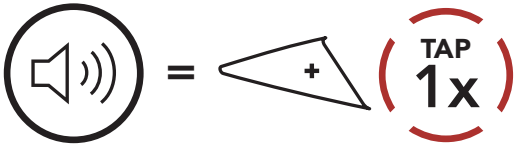

Volume Down

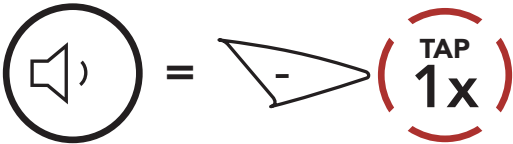

4. PAIRING THE HEADSET WITH OTHER BLUETOOTH DEVICES


When using the headset with other Bluetooth devices for the first time, they will need to be “paired.” This enables them to recognize and communicate with one another whenever they are within range.

The headset can pair with multiple Bluetooth devices such as a mobile phone, GPS, MP3 player or Sena SR10 Two-Way Radio Adapter via **Mobile Phone Pairing, Second Mobile Phone Pairing and GPS Pairing**. The headset can also be paired with up to three other ICON headsets.

Pairs with up to Three ICON headsets



Also Pairs with:

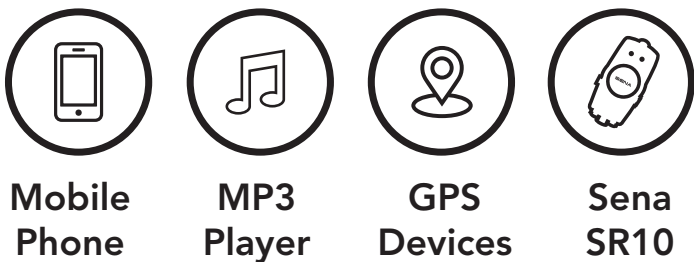

4.1 Phone Pairing

There are three ways to pair the phone.

4.1.1 Initially Pairing the HelmLink

The headset will automatically enter the phone pairing mode when you initially turn on the headset or in the following situation:

- Rebooting after executing **Factory Reset**; or
- Rebooting after executing **Delete All Pairings**.

1. Press and hold the **Center Button** and the **(+) Button** for **1 second**.



2. Select **HelmLink** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



Note:

- The phone pairing mode lasts for **3 minutes**.
- To cancel phone pairing, tap the **Center Button**.

4.1.2 Pairing When the HelmLink is Turned Off

1. While the headset is off, press and hold the **Center Button** and the **(+) Button** until the LED flashes red and blue alternately and you hear a voice prompt, **"Phone pairing"**.



2. Select **HelmLink** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.1.3 Pairing When the HelmLink is Turned On

1. While the headset is on, press and hold the **Center Button** for **10 seconds**.



2. Tap the **(+) Button**.



3. Select **HelmLink** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.2 Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10

1. Press and hold the **Center Button** for **10 seconds**.



2. Double tap the **(+) Button**.



3. Select **HelmLink** in the list of Bluetooth devices detected. If your Bluetooth device asks for a PIN, enter 0000.



4.3 Advanced Selective Pairing: Hands-Free or A2DP Stereo


Phone Pairing allows the headset to establish two Bluetooth profiles: **Hands-Free** or **A2DP Stereo**. **Advanced Selective Pairing** allows the headset to separate the profiles to enable connection with two devices.

4.3.1 Phone Selective Pairing - Hands-Free Profile

1. Press and hold the **Center Button** for **10 seconds**.



2. Tap the **(+) Button** 3 times.

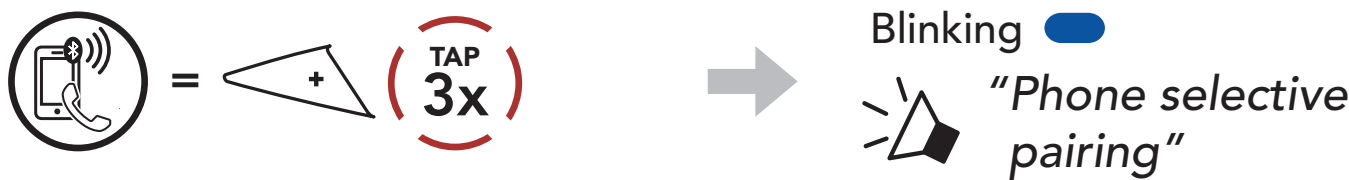

3. Select **HelmLink** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.3.2 Media Selective Pairing - A2DP Profile

1. Press and hold the **Center Button** for **10 seconds**.



2. Tap the **(+) Button** 4 times.



3. Select **HelmLink** in the list of Bluetooth devices detected. If your mobile phone asks for a PIN, enter 0000.



4.4 GPS Pairing

1. Press and hold the **Center Button** for **10 seconds**.



2. Tap the **(+) Button** 5 times.



3. Select **HelmLink** in the list of devices detected. If your Bluetooth device asks for a PIN, enter 0000.




Note: If you pair your GPS device via GPS Pairing, its instruction will not interrupt your Mesh Intercom conversations, but overlay with them. Bluetooth intercom conversations will be interrupted by GPS instructions.


5. MOBILE PHONE USAGE

5.1 Making and Answering Calls


Answer a Call

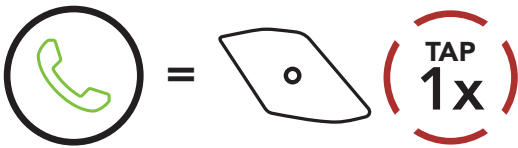

End a Call

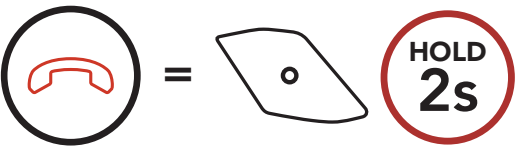

Reject a Call

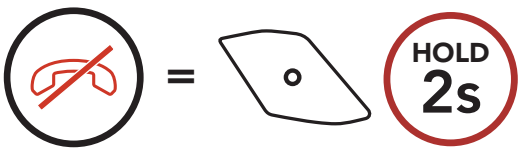

Note: If you have a GPS device connected, you will not hear its voice navigations during a phone call.

5.2 Siri and Google Assistant

The **HelmLink** supports the **Siri** and **Google Assistant** access directly. You can activate the **Siri** or **Google Assistant** using the voice through the HelmLink’s microphone, a wake word will be used. This is a word or groups of words such as **“Hey Siri”** or **“Hey Google”**.

Activate the Siri or Google Assistant Installed on Your Smartphone



5.3 Speed Dialing

5.3.1 Assigning Speed Dial Presets


Speed Dial Presets could be assigned through the **Sena Motorcycles App**.

5.3.2 Using Speed Dial Presets

1. Enter into the **Speed Dial** menu.



2. Navigate forward or backward through **Speed Dial Preset** numbers.

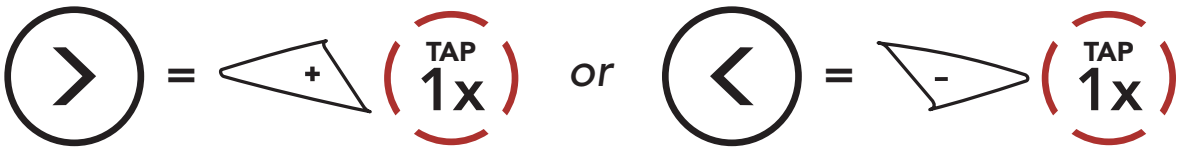

- (1) Last number redial

(2) Speed dial 1


(3) Speed dial 2
- (4) Speed dial 3

(5) Cancel

3. Call one of your **Speed Dial Presets** numbers.




4. Redial the last number called.

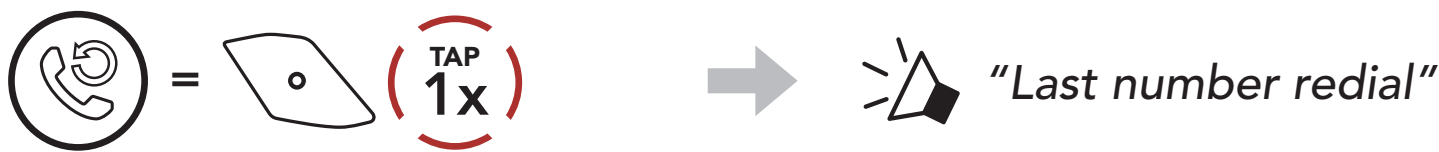


6. STEREO MUSIC

6.1 Bluetooth Stereo Music


Play/Pause Music

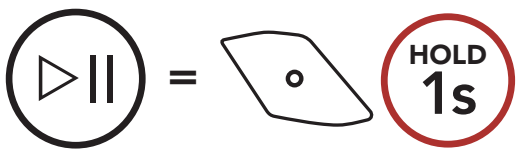

Next Track

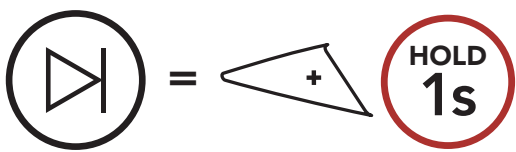

Previous Track

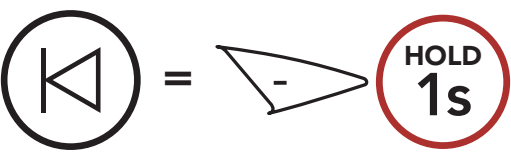

6.2 Music Sharing

You can start sharing music with one intercom friend using Bluetooth stereo music during a two-way intercom conversation and one participant of a Mesh. If you start sharing music while Bluetooth intercom and Mesh Intercom are running at the same time, then music shared during Bluetooth intercom will take priority over music shared during Mesh Intercom.


Note:

- Both you and your intercom friend can remotely control music playback such as track forward and track back.
- **Music sharing** will be paused when you are using your mobile phone or listening to GPS instructions.
- **Music sharing** will be terminated if the headset starts a multi-way intercom conference.

6.2.1 Bluetooth Intercom Music Sharing

You can start sharing the music with one intercom friend of a two-way intercom conversation.

Start/Terminate Sharing Music

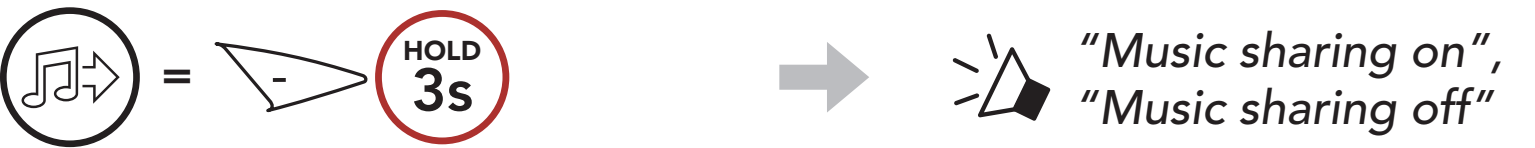


6.2.2 Mesh Intercom Music Sharing

Start Sharing Music

You can start sharing music with one participant of a **Mesh Intercom**.


- 1. The **Creator** will send a request message to **participants** connected during **Mesh Intercom**.

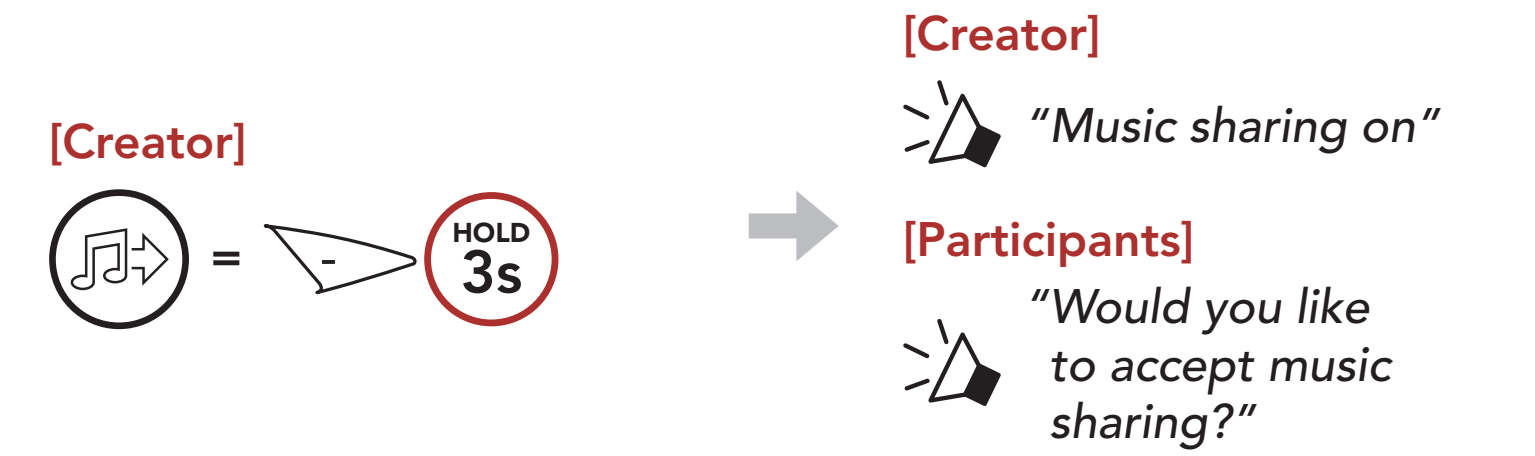

- 2. The **Creator** will share music with the **first participant** that accepts the request.



Terminate Sharing Music

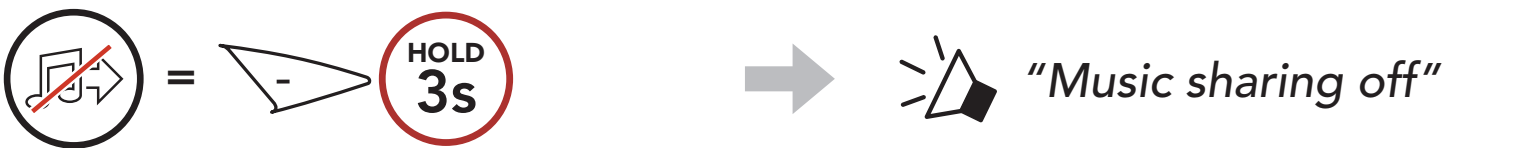


7. MESH INTERCOM

7.1 What is Mesh Intercom?

Mesh Intercom is a dynamic communication system created by Sena that provides instant and effortless bike-to-bike communication without a pre-grouping process. **Mesh Intercom** allows riders to connect and communicate with nearby users without the need to pair each headset together.

The working distance between each **HelmLink** in **Mesh Intercom** can be up to 2 km (1.2 miles) in open terrain. In open terrain, the **Mesh** can be extended up to 8 km (5 miles) between a minimum of six users. Within the same channel in **Open Mesh™** or the same private group in **Group Mesh™**, six users can talk at the same time and enjoy the optimal quality for their conversation.

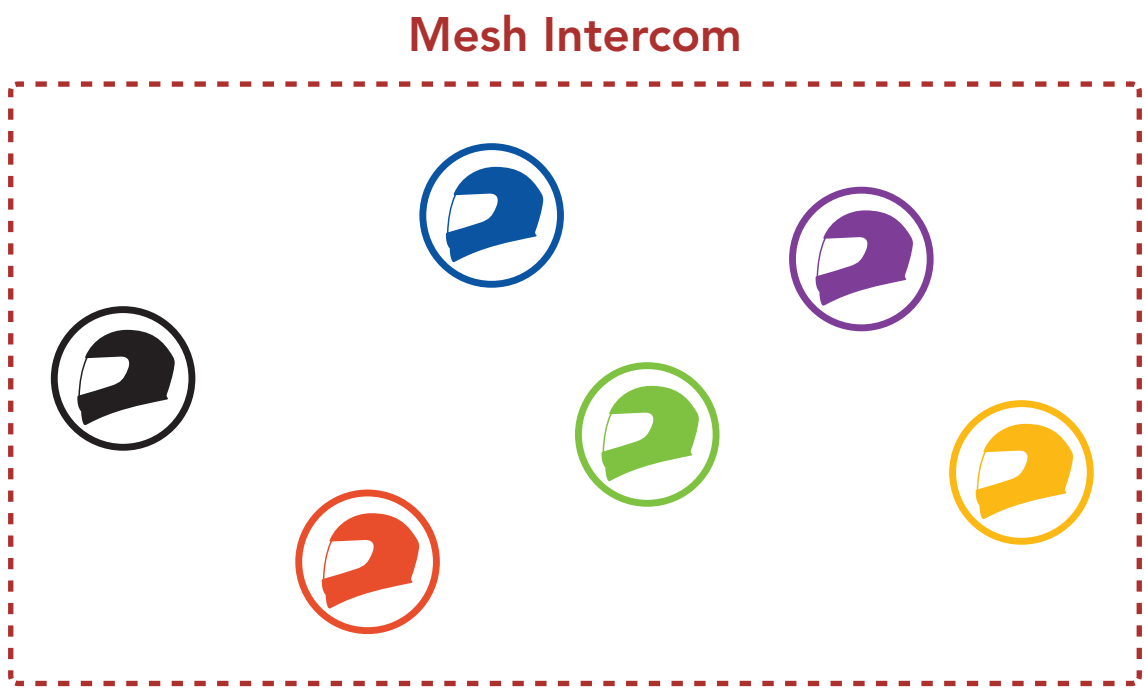

7.1.1 Open Mesh

Open Mesh is an open group intercom function. Users can freely communicate with each other in the same **Open Mesh** channel and select which channel (1-6) to use through the headset. It can connect with a virtually unlimited number of users in each channel.

Open Mesh



7.1.2 Group Mesh

Group Mesh is a closed group intercom function that allows users to join, leave, or rejoin a group intercom conversation without pairing each headset. Users can freely communicate with each other in the same private group in **Group Mesh**.

For closed intercom conversations using **Mesh Intercom**, a **Group Mesh** needs to be created by the users. When users create a private group in **Group Mesh** by **Mesh Grouping**, the headset automatically switches from **Open Mesh** to **Group Mesh**. Up to 24 users can all be connected in each private group.

Group Mesh



7.2 Mesh Version Switch


Switch to Mesh 2.0 for Backward Compatibility

Mesh 3.0 is the latest Mesh Intercom technology, but to communicate with legacy products using Mesh 2.0, please switch to Mesh 2.0 using the **Sena Motorcycles App**.

7.3 Starting Mesh Intercom

When **Mesh Intercom** is enabled, the **HelmLink** will automatically connect to nearby **HelmLink** users and allow them to talk to each other by pressing the **Mesh Button**.

Mesh Intercom On

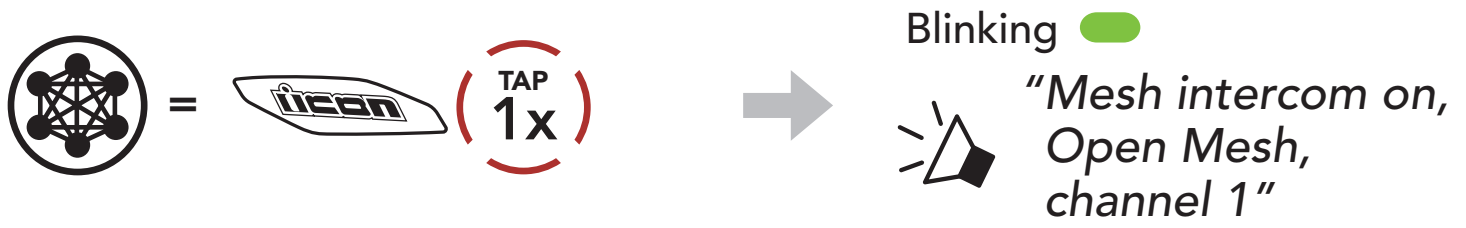

Mesh Intercom Off




7.4 Using the Mesh in Open Mesh

When **Mesh Intercom** is enabled, the headset will be in **Open Mesh (default: channel 1)** initially.


7.4.1 Channel Setting (Default: channel 1)

If the **Open Mesh** communication experiences interference because other groups are also using **channel 1 (default)**, change the channel. You can select from channels 1 to 6.

1. Double tap the **Mesh Button**.

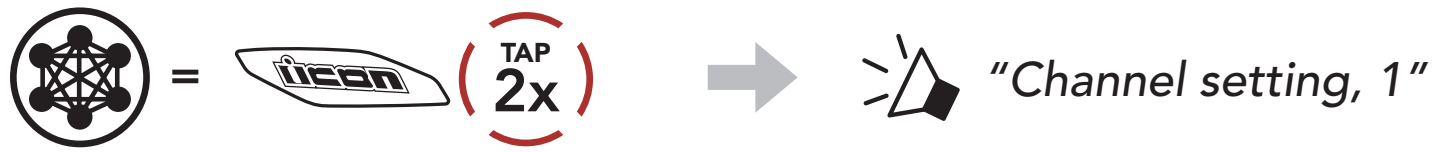

2. Navigate between channels.
(1 → 2 → ... → 6 → Exit → 1 → ...)

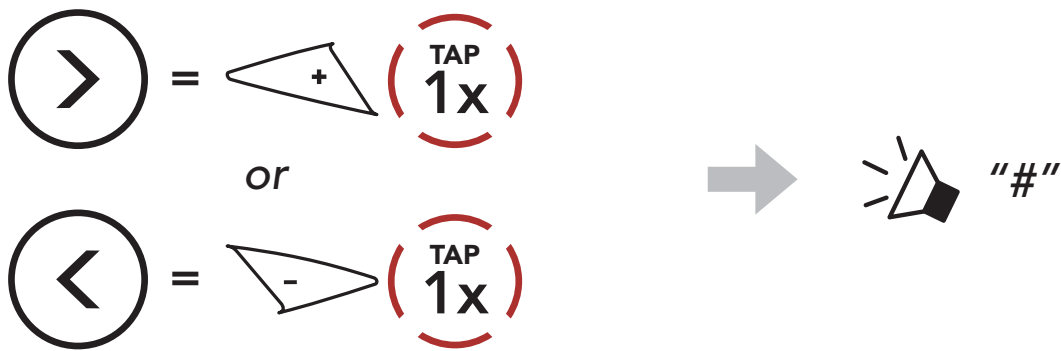

3. Save the channel.




- Note:**
- **Channel Setting** always starts with channel 1.
 - If you do not press any button for approximately **10 seconds** in a specific channel, the channel is automatically saved.
 - The channel will be remembered even if you turn off the **HelmLink**.
 - You can use the **Sena Motorcycles App** to change the channel.

7.5 Using Mesh in Group Mesh

7.5.1 Creating a Group Mesh

Creating a **Group Mesh** requires **two or more Open Mesh users**.

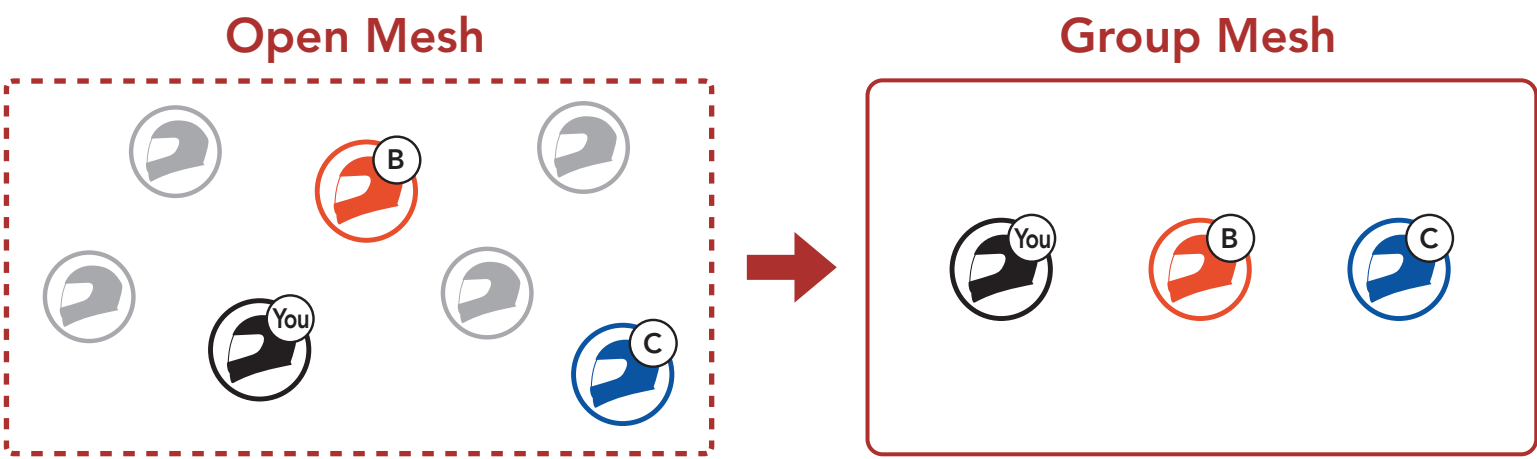

1. To enter **Mesh Grouping** to create a **Group Mesh**, press and hold the **Mesh Button** for **5 seconds** on the headset of the **users (You, B, and C)**.



2. When **Mesh Grouping** is completed, the **users (You, B and C)** will hear a voice prompt on their headsets as **Open Mesh** switches to **Group Mesh**.




Note:

- If the **Mesh Grouping** is not completed within **30 seconds**, users will hear a voice prompt, **"Grouping failed"**.
- If you want to cancel during the **Mesh Grouping**, tap the **Mesh Button**.

7.5.2 Joining an Existing Group Mesh

One of the **current users** in an **Existing Group Mesh** can allow **new users (one or more)** in **Open Mesh** to join the **Existing Group Mesh**.

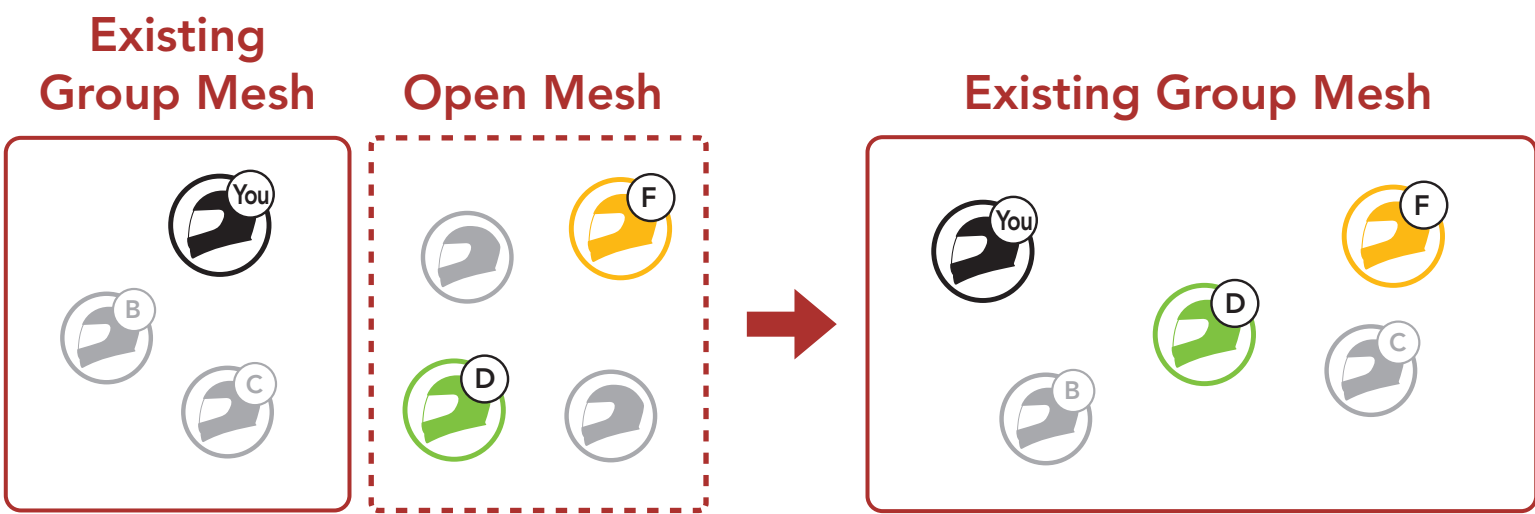

1. To enter **Mesh Grouping** to join the **Existing Group Mesh**, press and hold the **Mesh Button** for **5 seconds** on the headsets of **one (You) of the current users** in the **Existing Group Mesh** and the **new users (D and F)** in **Open Mesh**.




2. When **Mesh Grouping** is completed, the **new users (D and F)** will hear a voice prompt on their headsets as **Open Mesh** switches to **Group Mesh**.



Note: If the **Mesh Grouping** is not completed within **30 seconds**, the current user (You) will hear a low tone double beep and the new users (D and F) will hear a voice prompt, **"Grouping failed"**.

7.6 Enable/Disable Mic (Default: Enable)

Users can enable/disable the microphone when communicating in a **Mesh Intercom**.

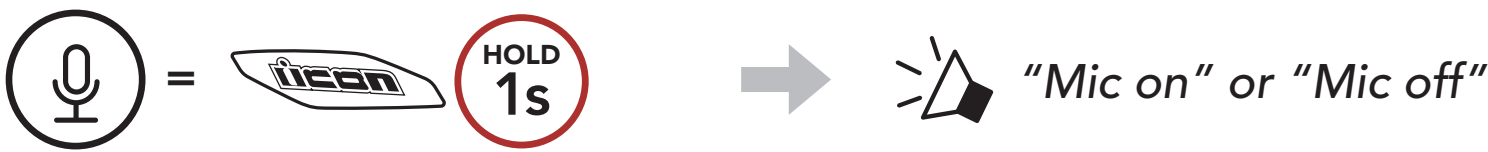


7.7 Toggling Open Mesh/Group Mesh

Users are able to toggle between **Open Mesh** and **Group Mesh** without resetting the **Mesh**. This allows users to keep the **Group Mesh Network** connection information while in **Open Mesh**.

Users can toggle to **Group Mesh** to communicate with participants from the stored **Group Mesh Network** connection information.

Toggle Between Open Mesh and Group Mesh

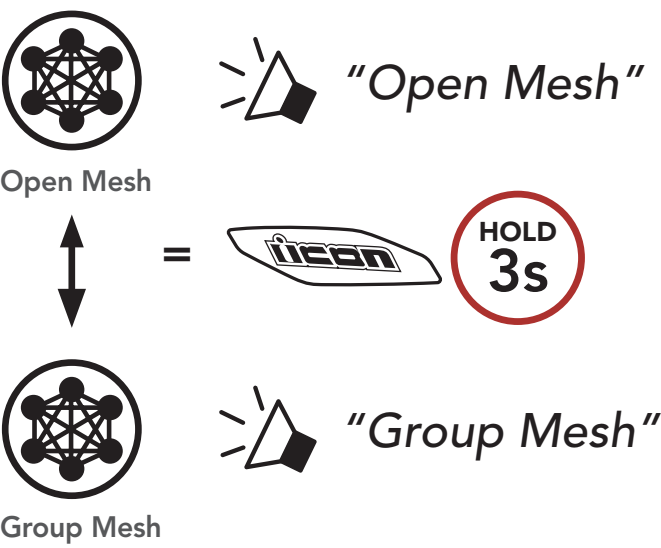

Note: If you have never participated in **Group Mesh**, you cannot toggle between **Open Mesh** and **Group Mesh**. You will hear a voice prompt, **"No Group Available"**.

7.8 Reset Mesh

If the headset in an **Open Mesh** or **Group Mesh** resets the **Mesh**, it will automatically return to **Open Mesh (default: channel 1)**.



8. WAVE INTERCOM

Wave Intercom enables open communication using cellular data. For detailed information, please refer to the **Wave Intercom User Guide** on sena.com.

8.1 Starting Wave Intercom

To start Wave Intercom, you must open the **WAVE Intercom App** first. Then, double-tap the **Mesh Button** to join Wave Intercom. You will hear a voice prompt, **"Wave Intercom on."**

When Wave Intercom is enabled, you will automatically connect with users in the Wave Zone. The Wave Zone covers a 1-mile radius in North America, and a 1.6-km radius in Europe.

To end Wave Intercom, single-tap the **Mesh Button**. You will hear a voice prompt, **"Wave Intercom off."**

8.2 Switching between Wave Intercom and Mesh Intercom

You can easily switch between Mesh Intercom and Wave Intercom with a single tap on the **Center Button**.


When switching from Mesh Intercom to Wave Intercom, you will hear a voice prompt, **"Mesh Intercom off. Wave Intercom on."**

When switching back, you will hear a voice prompt, **"Wave Intercom off. Mesh Intercom on."**

Note: When the app is in use, the Bluetooth Intercom becomes temporarily disabled.

9. BLUETOOTH INTERCOM

Up to three other people can be paired with the headset for Bluetooth intercom conversations.

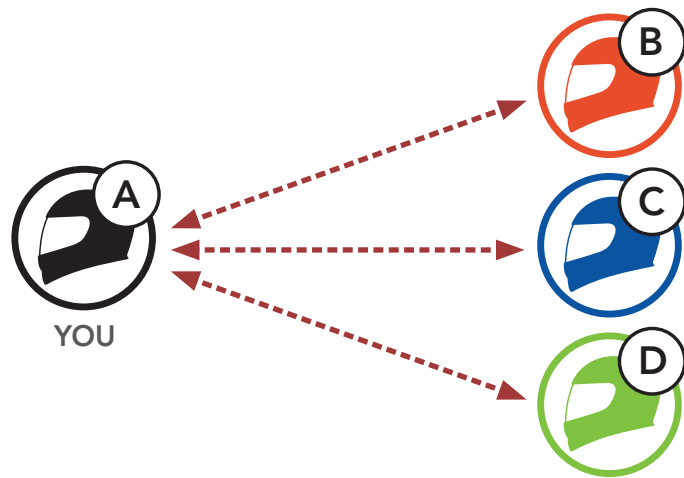

9.1 Intercom Pairing

There are two ways to pair the headset.

9.1.1 Using QR Codes


1. Pair the mobile phone with the **HelmLink**.
2. Each user opens the **Sena Motorcycles App** and taps “QR Pairing.”
3. Scan the QR code displayed on the other user’s screen.
4. Tap Save, and go to the “Bluetooth Intercom” menu to check the pairing list.
5. Tap the device name you want to pair with.
6. Repeat the process to add more headsets.

Note: QR Pairing is compatible with models featuring Bluetooth version 3.0 or later. For more information, visit **sena.com**.

9.1.2 Using the Button



1. **Users (You, B)** enter into **Intercom Pairing**.

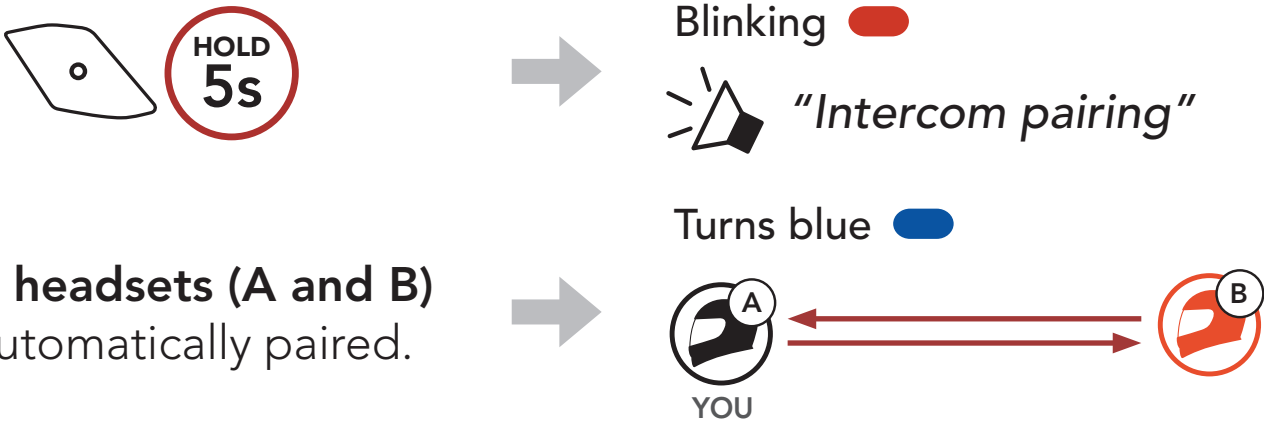


2. The **two headsets (A and B)** will be automatically paired.

3. Repeat the steps above to pair with **other headsets (C and D)**.


9.2 Last-Come, First-Served

The intercom pairing queue is **Last-Come, First-Served**. If the headset has multiple paired headsets for intercom conversations, the last paired headset is set as the **First Intercom Friend**. For example, after the pairing procedures listed above, **headset (D)** is the **First Intercom Friend** of headset (A). **Headset (C)** is the **Second Intercom Friend** of headset (A), and **headset (B)** is the **Third Intercom Friend** of headset (A).

Intercom Pairing Order

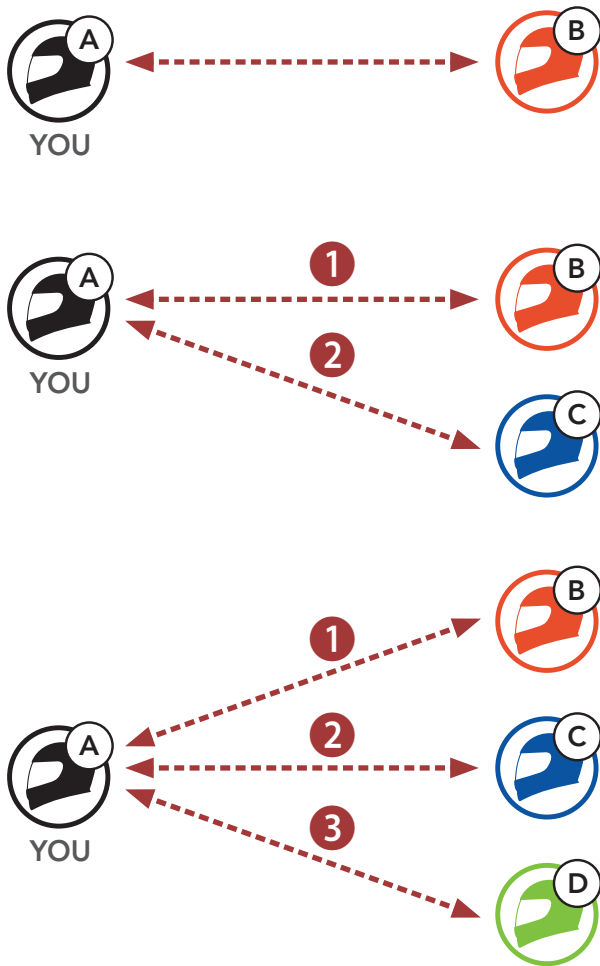

Last-Come, First-Served

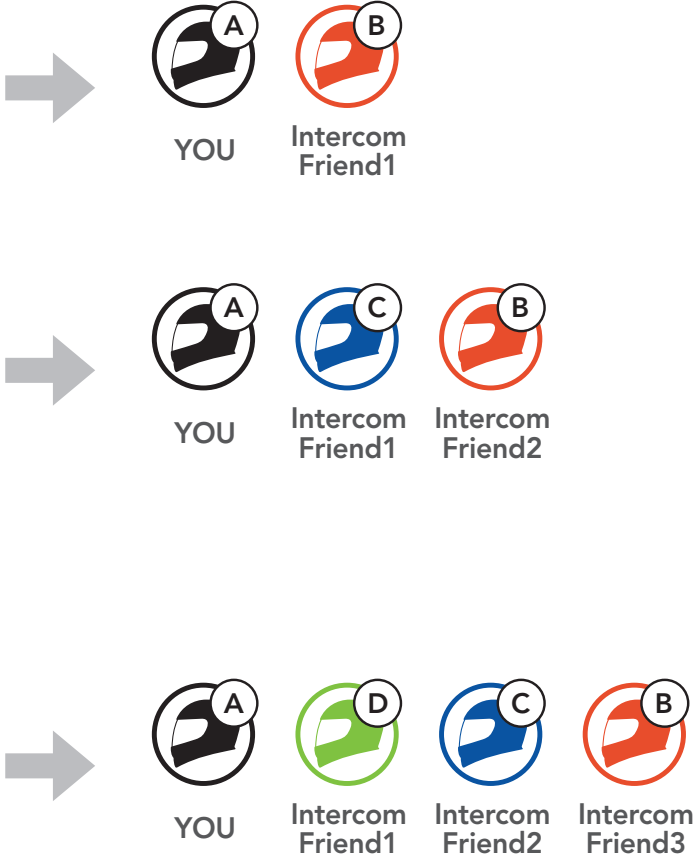


9.3 Two-Way Intercom


You can start or end an intercom conversation with an **Intercom Friend**.




Start/End Conversation with the First Intercom Friend D

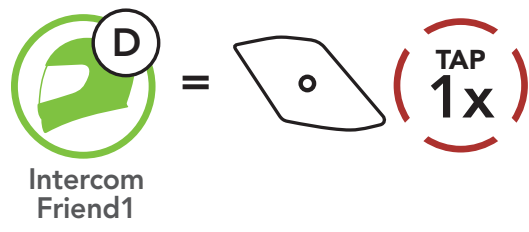

Start/End Conversation with the Second Intercom Friend C

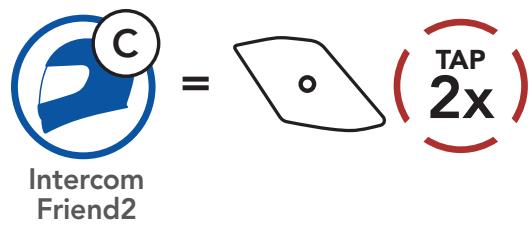

Start/End Conversation with the Third Intercom Friend B

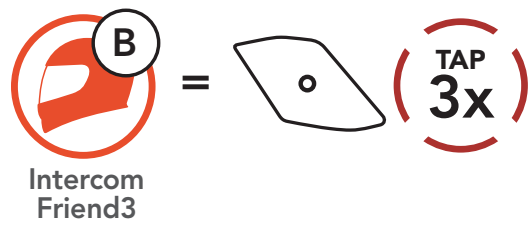

9.4 Multi-Way Intercom

Multi-Way Intercom enables conference-call-style conversations with up to **three Intercom Friends** at the same time. While **Multi-Way Intercom** is in progress, the mobile phone connection is temporarily disconnected. However, as soon as **Multi-Way Intercom** terminates, the mobile phone connection will be reestablished.

9.4.1 Starting a Three-Way Intercom Conference

You (A) can have a **Three-Way Intercom Conference** with two other **Intercom Friends (B and C)** by establishing two intercom connections simultaneously.

1. **You (A)** need to be paired with two other **Intercom Friends (B and C)** for the **Three-Way Intercom Conference**.



2. Start an intercom conversation with the **First Intercom Friend (C)** by tapping the **Center Button**.



3. **You (A)** can call the **Second Intercom Friend (B)** by double tapping the **Center Button**, or the **Second Intercom Friend (B)** may join the intercom by making an intercom call to **you (A)**.



4. Now **you (A)** and **two Intercom Friends (B and C)** are having a **Three-Way Intercom Conference**.




9.4.2 Starting a Four-Way Intercom Conference

With **three Intercom Friends** connected, a new participant (**D**) can make it a **Four-Way Intercom Conference** by making an intercom call to either (**B**) or (**C**).

- 1. **Intercom friend (B)** needs to be paired with a **new participant (D)**.



- 2. **Intercom friend (B)** can call a **new participant (D)** by tapping the **Center Button**, or a **new participant (D)** may join the intercom by making an intercom call to **Intercom friend (B)**.

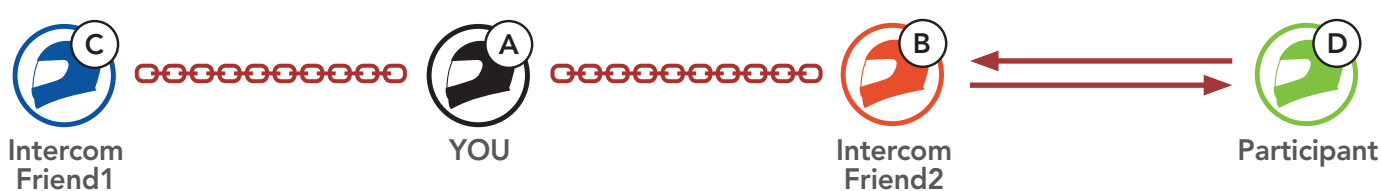

- 3. Now **you (A)**, **two Intercom Friends (B and C)**, and a **new participant (D)** are having a **Four-Way Intercom Conference**.



9.4.3 Ending Multi-Way Intercom

You can completely terminate the conference intercom or just disconnect an intercom connection with one of your active **Intercom Friends**.

Terminate All Intercom Connections

- Press and hold the **Center Button** for **3 seconds**.

Disconnect the Intercom Connection with One of the Intercom Friends

- Disconnect (C): Tap the **Center Button**.
- Disconnect (B) & (D): Double tap the **Center Button**.


Note: When you disconnect the **second friend (B)**, you will be disconnected with the **third participant (D)** as well. This is because the **third participant (D)** is connected with you via the **second friend (B)**.

9.5 Three-Way Conference Phone Call with Intercom Users

You can have a **Three-Way Conference Phone Call** by adding an **Intercom Friend** to the mobile phone conversation.


1. During a mobile phone call, tap the **Center Button once, twice, or three times** to invite one of your **Intercom Friends** to the conversation.

Invite an Intercom Friend into Phone Conference

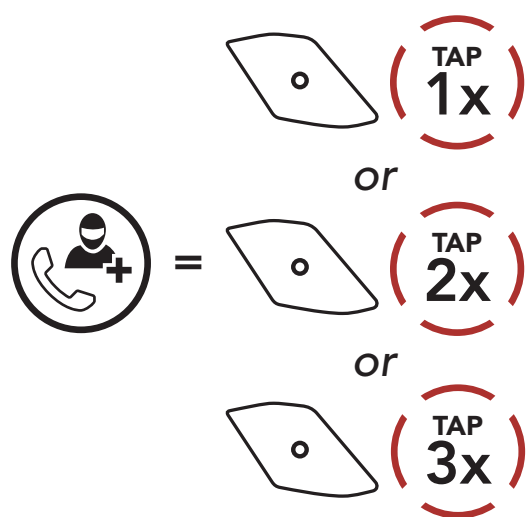


2. To disconnect the intercom during a conference phone call, tap the **Center Button once, twice, or three times**.

Disconnect the Intercom Friend from Conference

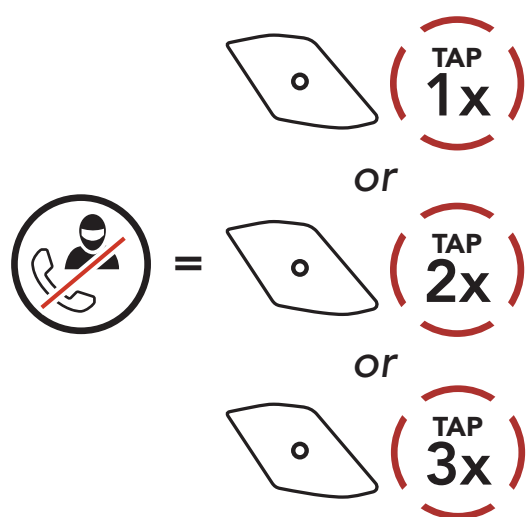

3. To disconnect the mobile phone call during a conference phone call, press and hold the **Center Button** for **2 seconds**.

End Phone Call from Conference

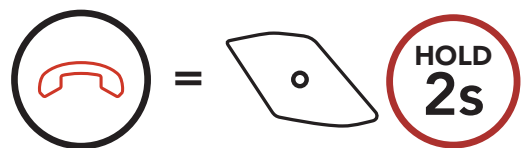


Note: When you have an incoming intercom call during a mobile phone call, you will hear high tone double beeps.

9.6 Group Intercom

Group Intercom allows you to instantly create a **Multi-Way Conference Intercom** with three of the most recently paired headsets.

To Start the Group Intercom

1. Go through intercom pairing with up to three headsets you want to have **Group Intercom** with.

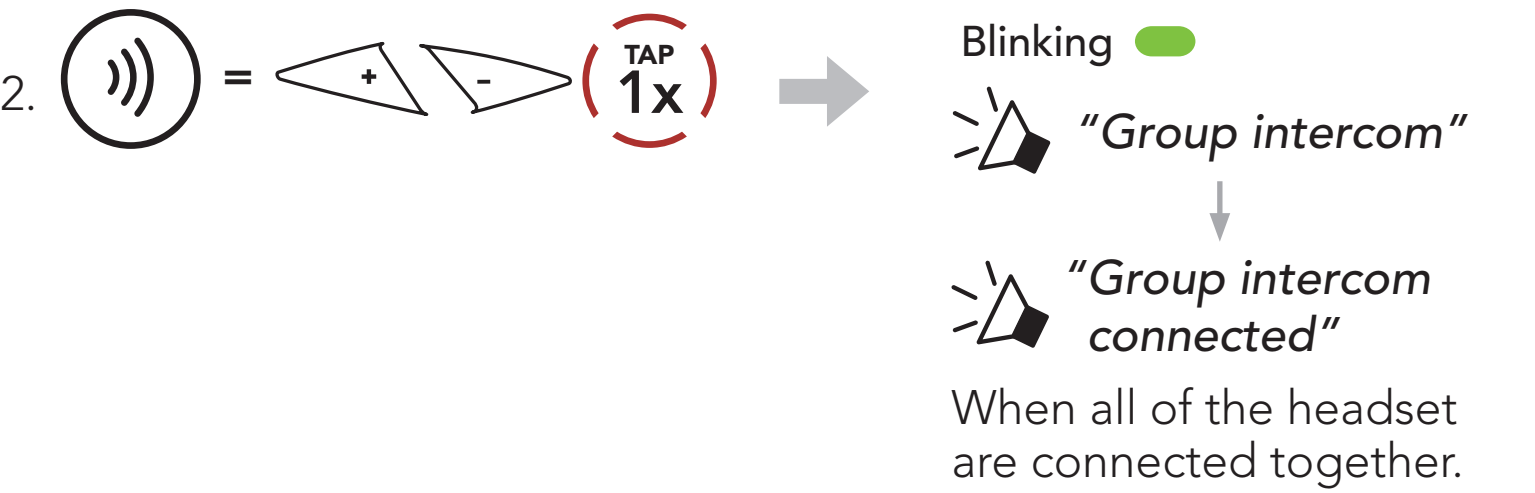

Terminate Group Intercom




9.7 Mesh Intercom Conference with Bluetooth Intercom Participant


Users can use the existing Bluetooth intercom and **Mesh Intercom** function at the same time. In this case, it is recommended to communicate with other ICON headset via Bluetooth intercom connection and use **Mesh Intercom** between **HelmLink** headset. A user who is in **Open Mesh** or **Group Mesh** when using Mesh Intercom is able to include up to 3 of their Bluetooth intercom friends. You can start a Two-Way Intercom conversation with one of your three Intercom Friends to include them in the Mesh.

Note:

- The audio quality will be reduced if a **HelmLink** connects to 2 or more Bluetooth intercom friends while in **Open Mesh** or **Group Mesh** when using **Mesh Intercom**.
- If a closed loop is created, as shown below, each user will experience severe noise issues. ICON recommends that a closed loop not be created.

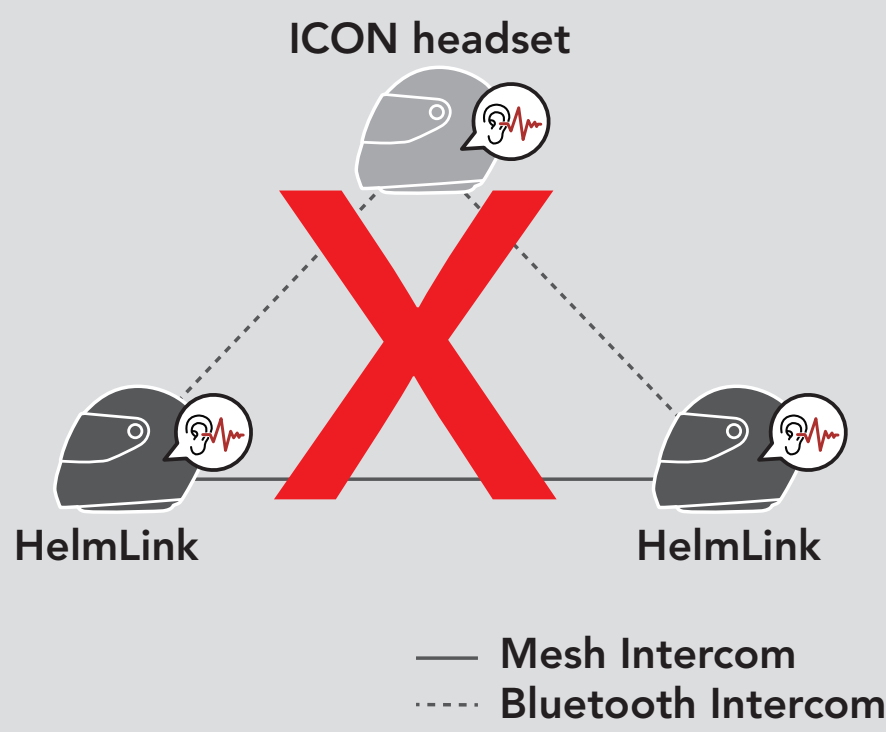

- If **Bluetooth intercom** is accidentally turned on during **Mesh Intercom** communication between **HelmLink** headsets, as shown below, you will hear a voice prompt, **"Mesh intercom disabled. Bluetooth intercom connected"** every **1 minute**. If you turn off the **Bluetooth Intercom** or turn off the **Mesh Intercom**, the voice prompt will no longer come out.

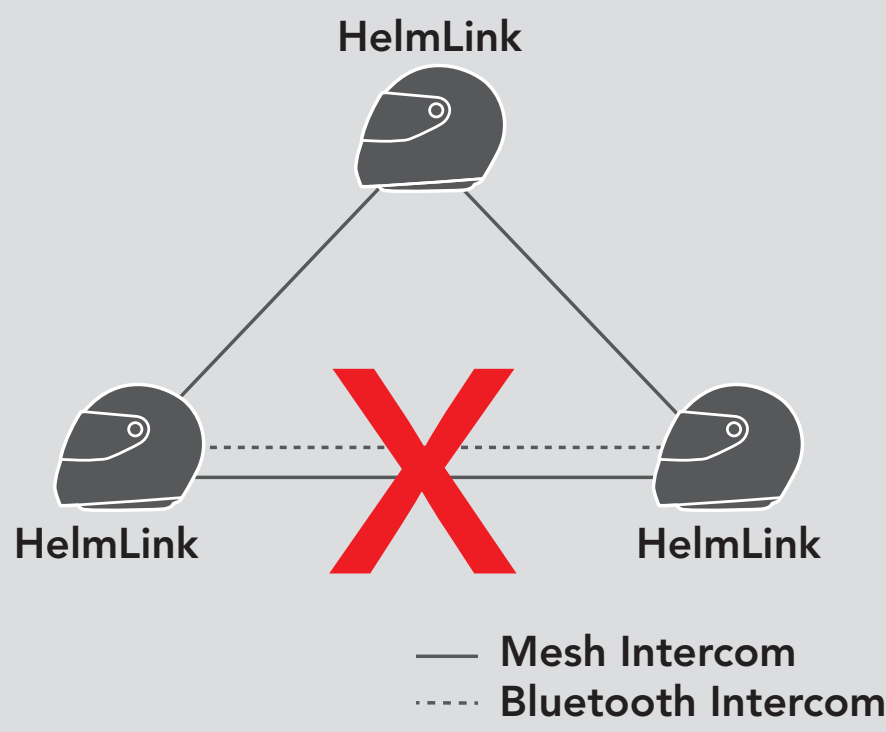

10. UNIVERSAL INTERCOM

Universal Intercom allows you to have intercom conversations with users of non-ICON Bluetooth headsets. Non-ICON Bluetooth headset can be connected to the ICON headset if they support the **Bluetooth Hands-Free Profile (HFP)**. You can pair the headset with only one non-ICON headset at a time. The intercom distance depends on the performance of the headset to which it's connected. When a non-ICON headset is paired with the headset while another Bluetooth device is paired via **Second Mobile Phone Pairing**, it will be disconnected.

10.1 Universal Intercom Pairing

1.

 = 

HOLD

10s



 "Configuration menu"
2.

 = 

TAP

3x



 "Universal intercom pairing"
3.

 = 

TAP

1x




Enter into **Universal Intercom Pairing** mode.
4.

Put the non-ICON headset in Hands-free Pairing Mode. The headset will automatically pair with a non-ICON Bluetooth headset.

10.2 Two-Way Universal Intercom

You can initiate the **Universal Intercom** connection with non-ICON Bluetooth headsets using the same intercom connection method as you would between other ICON headsets.

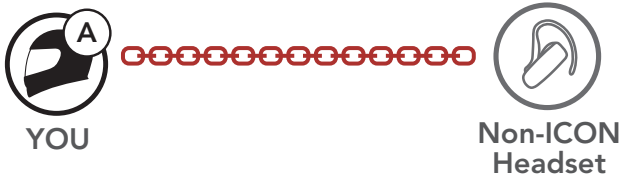

You may start/end a **Two-Way Universal Intercom** using the same way as you do in a normal **Two-Way Intercom**. Please refer to **Section 9.3: "Two-Way Intercom"**.

10.3 Multi-Way Universal Intercom

You can have **Multi-Way Intercom** communication with up to **three Intercom Friends** using non-ICON headsets. Some non-ICON headsets may not support **Multi-Way Universal Intercom**.


You may make the **Multi-Way Universal Intercom** call the same way as a normal four-way intercom call.

You may start/end a **Multi-Way Universal Intercom** using the same way as you do in a normal **Multi-Way Intercom**. Please refer to **Section 9.4: "Multi-Way Intercom"**.

10.3.1 Three-Way Universal Intercom

You may make a **Three-Way Universal Intercom** connection with two headsets and one non-ICON Bluetooth headset. If the intercom connection is made, all headsets connected cannot use the mobile phone call function since the connection between the headset and the phone is disconnected temporarily. If you disconnect the intercom call, the mobile phone connection is made again automatically so that you can use a mobile phone call function.

- 1. **You (A)** need to be paired with a non-ICON Bluetooth headset **(B)** and another headset **(C)** for the **Three-Way Conference Intercom**.

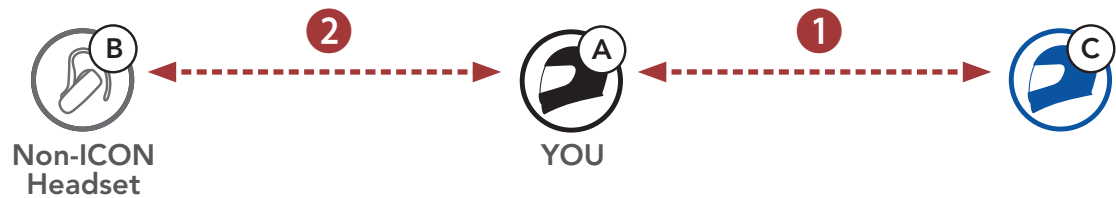

- 2. Start an intercom conversation with a non-ICON Bluetooth headset **(B)** in your intercom group. For example, **you (A)** may start an intercom conversation with non-ICON Bluetooth headset **(B)**. The non-ICON Bluetooth headset **(B)** may also start an intercom call with **you (A)**.



- 3. The other headset **(C)** may join the intercom by making an intercom call to **you (A)**.



4. Now **you (A)**, non-ICON Bluetooth headset **(B)**, and the other headset **(C)** are having a **Three-Way Conference Intercom**.



10.3.2 Four-Way Universal Intercom


You may make the **Four-Way Universal Intercom** call the same way as a normal **Four-Way Intercom** call.

You may make a **Four-Way Universal Intercom** connection with a couple of different configurations,

- 1) two headsets and two non-ICON Bluetooth headsets or
- 2) three headsets and one non-ICON Bluetooth headset.


Four-Way Universal Intercom Case 1

1) **You (A)**, a non-ICON Bluetooth headset **(B)**, another headset **(C)**, and a non-ICON Bluetooth headset **(D)**.

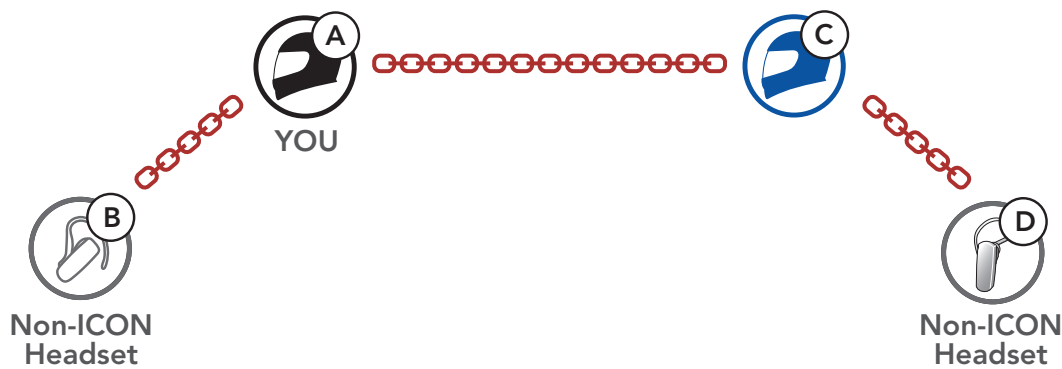

Four-Way Universal Intercom Case 2

2) **You (A)**, a non-ICON Bluetooth headset **(B)**, and **two other headsets (C and D)**.

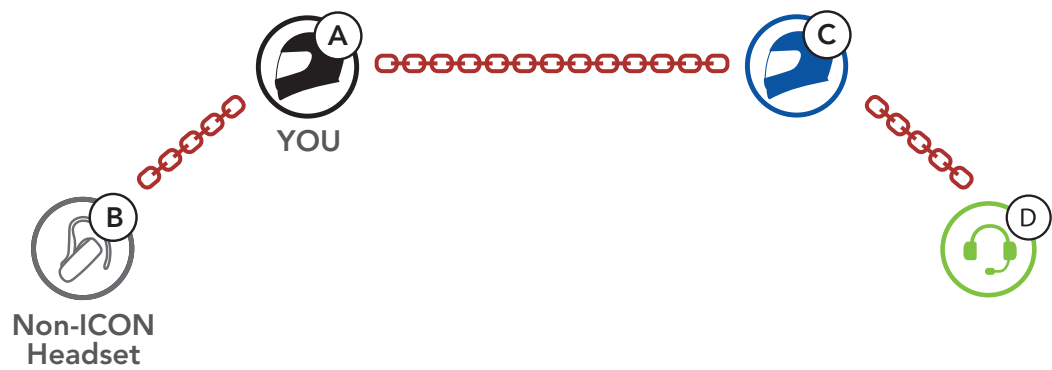

10.4 Mesh Intercom Conference with Two-way Universal Intercom Participant

Users can use the existing **Two-way Universal Intercom** and **Mesh Intercom** function at the same time. In this case, it is recommended to communicate with **non-ICON headset** via **Two-way Universal Intercom** connection and use **Mesh Intercom** between **HelmLink headsets**.

A user who is in **Open Mesh** or **Group Mesh** when using **Mesh Intercom** is able to include one **Universal Intercom friend**. You can start a **Two-way Universal Intercom** conversation with your **Universal Intercom Friend** to include it in the **Mesh**.

11. USING THE FM RADIO

11.1 FM Radio On/Off

FM Radio On



FM Radio Off




11.2 Seek and Save Radio Stations


The **“Seek”** feature searches for radio stations.

1. Search for radio stations.

Seek Stations Forward

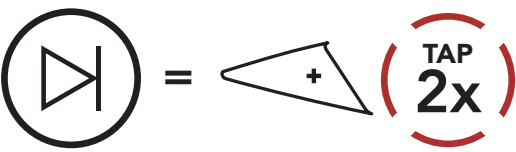

Seek Stations Backward

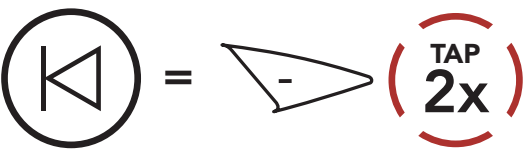

2. Save the current station.

Enter Preset Selection Mode




3. Navigate through the preset numbers that you want to store.

Navigate Forward/Backward Through Preset Stations




4. Save the station in the preset number you choose or delete the station from memory.

Save Station to the Preset Number

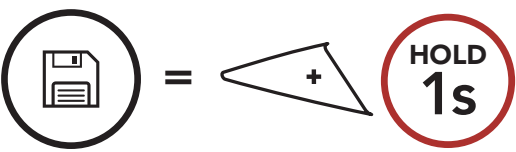

Delete Station from Memory

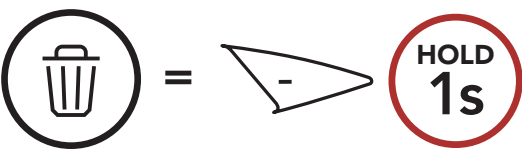


11.3 Scan and Save Radio Stations


The **“Scan”** function automatically searches for radio stations, starting with the current station’s frequency, then up from there.

1. Scan for stations.

Start Scanning

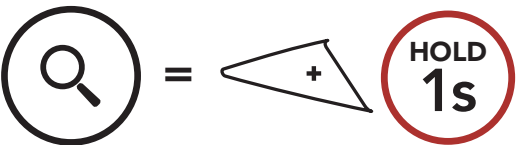

Stop scanning

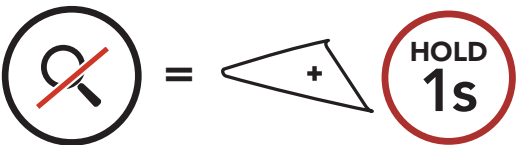

2. The ICON tuner pauses at each station it finds for **8 seconds** before moving to the next.
3. Save the current station. The station will be saved as the next preset number.

Save the Current Station




Note: You can use the **Sena Motorcycles App** to save the preset stations.

11.4 Temporary Station Preset

The **Temporary Preset** feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

1. Automatically find and save 10 stations.

Temporary Stations

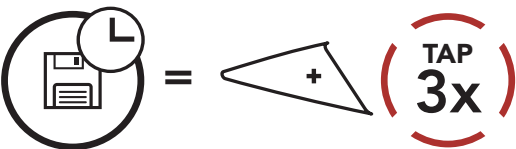


2. The temporary preset stations will be cleared when the headset reboots.

11.5 Navigating Preset Stations

Using the methods above, up to 10 radio stations can be stored. You can navigate through the saved stations.

Navigate through Preset Stations

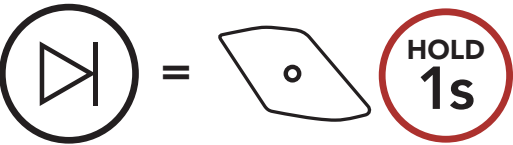

12. LED TAILLIGHT

12.1 Using the Button

Do not tap the button continuously.

LED On and Solid



Night Flash




Day Flash



Adaptive Flash*



LED Off

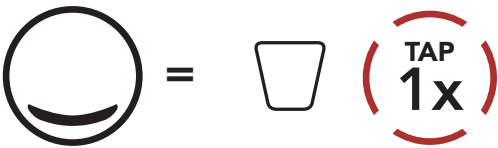

- **Adaptive Flash***: the LED blinks once every 2 seconds in the normal status, but when a large deceleration is detected, the LED will blink quickly for 5 seconds. After 5 seconds or a large acceleration is detected, the LED will blink in the normal state again.

12.2 Using the Sena Motorcycles App

You can control the LED Taillight through the **Sena Motorcycles App**.

13. VOICE COMMAND

The **Voice Command** of the headset allows you to operate certain operations by simply using your voice. You can control the headset completely hands-free using the voice recognition. Multi-language Voice Command supports **English, French, German, Spanish, Italian, Chinese, Japanese, and Russian.**

Speak a Voice Command List

Mode Status	Function	Voice Command
Standby/ Bluetooth Intercom/Mesh Intercom/FM Radio/Music	Check battery	"Hey Sena, Check Battery"
	Volume Up	"Hey Sena, Volume Up"
	Volume Down	"Hey Sena, Volume Down"
	Phone Pairing	"Hey Sena, Phone Pairing"
	Bluetooth Intercom Pairing	"Hey Sena, Pairing Intercom"
	Start/End each Bluetooth Intercom	"Hey Sena, Intercom [one, two, three]"
Standby/ Bluetooth Intercom/FM Radio/Music	Turn on Mesh Intercom	"Hey Sena, Mesh On"
Mesh Intercom	Turn off Mesh Intercom	"Hey Sena, Mesh Off"
	Mesh Grouping	"Hey Sena, Mesh Grouping"
	Switch to Open Mesh	"Hey Sena, Open Mesh"
	Switch to Group Mesh	"Hey Sena, Group Mesh"
	End the Bluetooth intercom and Mesh intercom	"Hey Sena, End intercom"
Standby/ Bluetooth Intercom/Mesh Intercom	Play Music	"Hey Sena, Play Music"
Standby/ Intercom/Mesh Intercom/Music	Turn on FM radio	"Hey Sena, FM Radio On"

Mode Status	Function	Voice Command
Music/FM Radio	- FM - Next Preset - Music - Next Track	"Hey Sena, Next"
	- FM - Previous Preset - Music - Previous Track	"Hey Sena, Previous"
Music	Pause Music	"Hey Sena, Stop Music"
FM Radio	Turn off FM Radio	"Hey Sena, FM Radio Off"
Answer an Incoming Call		"Answer"
Ignore an Incoming Call		"Ignore"

- Note:**
- You can set a language to another language by using the **Language** feature on the **Sena Motorcycles App**.
 - If you set a language that does not support voice commands, the voice command will work only with English commands.
 - You can see the another language’s voice command list on the **Sena Motorcycles App**.
 - Voice command** performance may vary based on the environmental conditions.

14. FUNCTION PRIORITY AND FIRMWARE UPGRADES

14.1 Function Priority

The headset operates in the following order of priority:

- (highest) Mobile phone
- Mesh Intercom/Bluetooth Intercom
- Music sharing by Bluetooth stereo music
- FM radio
- (lowest) Bluetooth stereo music

A lower-priority function gets interrupted by a higher-priority function. For example, stereo music will be interrupted by an **Intercom Conversation**; an **Intercom Conversation** will be interrupted by an incoming mobile phone call.


14.2 Firmware Upgrades

You can upgrade firmware using the **Sena Device Manager**. The **USB Power & Data Cable (USB-C)** must be connected to your **PC** to upgrade firmware using the **Sena Device Manager**.



15. CONFIGURATION SETTING

15.1 Headset Configuration Menu


Accessing the Configuration Menu

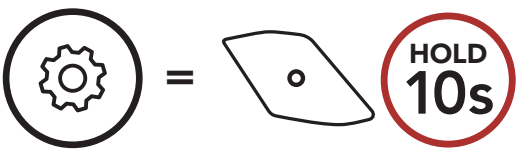

Navigating Between Menu Options

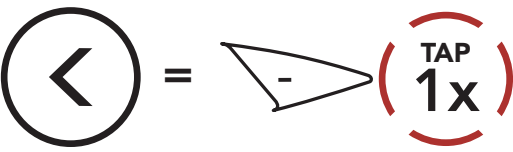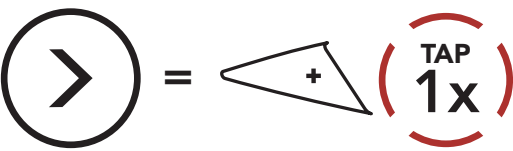

Execute Menu Options

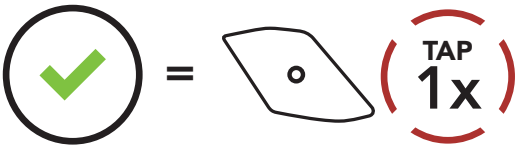

Headset Configuration Menu

Voice Configuration Menu	Tap the Center Button
Mobile Phone Pairing	None
Second Mobile Phone Pairing	None
Phone Selective Pairing	None
Media Selective Pairing	None
GPS Pairing	None
Delete All Pairings	Execute
Remote Control Pairing	Execute
Universal Intercom Pairing	Execute
Factory Reset	Execute
Exit Configuration	Execute

15.1.1 Delete All Pairings

You can delete all Bluetooth pairing information of the headset.

15.1.2 Remote Control Pairing

You can remotely control the headset using **Sena Remote Control devices** (sold separately).

1. Turn on the headset and the Remote Control device.
2. Execute **Remote Control Pairing**.
3. Enter pairing mode in the Remote Control device. The headset will automatically connect with the Remote Control device in pairing mode.

15.2 Software Configuration Setting

You can change the settings of the headset through the **Sena Motorcycles App** or the **Sena Device Manager**.



15.2.1 Language

You can select the device language. The selected language is maintained even when the headset is rebooted.

15.2.2 Equalizer (Default: Off)

You can use the **Equalizer** to increase/decrease the decibel level of different frequency ranges of audio.

- **Balance** will adjust all of the frequency ranges to be the same volume level (0 dB).
- **Bass Boost** will increase the bass range of audio (20 Hz - 250 Hz).
- **Mid Boost** will increase the mid range of audio (250 Hz - 4 kHz).
- **Treble Boost** will increase the high range of audio (4 kHz - 20 kHz).

15.2.3 VOX Phone (Default: Enable)

If this feature is enabled, you can answer incoming calls by voice. When you hear a ringtone for an incoming call, you can answer the phone by saying a word such as **"Hello"** loudly or by blowing air into the microphone. **VOX Phone** is temporarily disabled if you are connected to intercom. If this feature is disabled, you have to tap the **Center Button** to answer an incoming call.

15.2.4 VOX Intercom (Default: Disable)

If this feature is enabled, you can initiate an intercom conversation with the last connected intercom friend by voice. When you want to start intercom, say a word such as **"Hello"** loudly or blow air into the microphone. If you start an intercom conversation by voice, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the **Center Button**, you have to terminate the intercom conversation manually. However, if you start the intercom by voice and end it manually by tapping the **Center Button**, you will not be able to start intercom by voice temporarily. In this case, you have to tap the **Center Button** to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. After rebooting the headset, you can start intercom by voice again.

15.2.5 VOX Sensitivity (Default: 3)

VOX Sensitivity can be adjusted depending on your riding environment. **Level 5** is the highest sensitivity setting and **level 1** is the lowest.

15.2.6 HD Intercom (Default: Enable)

HD Intercom enhances the two-way intercom audio from normal quality to HD quality. **HD Intercom** will become temporarily disabled when you enter into a multi-way intercom. If this feature is disabled, the two-way intercom audio will change to normal quality.

Note:

- The intercom distance of **HD Intercom** is relatively shorter than that of normal intercom.
- **HD Intercom** will become disabled temporarily when **Bluetooth Intercom Audio Multitasking** is enabled.

15.2.7 HD Voice (Default: Enable)

HD Voice allows you to communicate in high-definition during phone calls. This feature increases the quality so that the audio will be crisp and clear during phone call conversations. If this feature is enabled, incoming phone calls will interrupt intercom conversations and audio from the SR10 will not be heard during intercom conversations. **Three-Way Conference Phone Call with Intercom Participant** will not be available if **HD Voice** is enabled.

Note:

- Refer to the manufacturer of your Bluetooth device that will be connected to the headset to see if it supports **HD Voice**.
- **HD Voice** is active only when **Bluetooth Intercom Audio Multitasking** is disabled.

15.2.8 Bluetooth Intercom Audio Multitasking (Default: Disabled)

Audio Multitasking (Bluetooth Intercom Audio Multitasking and Mesh Intercom Audio Multitasking) allows you to have an intercom conversation while simultaneously listening to music, FM radio, or GPS instructions. The overlaid audio is played in the background with reduced volume whenever there is an intercom conversation and will return to normal volume once the conversation is finished.

The **Mesh Intercom Audio Multitasking** feature is **always on**.

Note:

- For **Bluetooth Intercom Audio Multitasking** to work properly, you need to power the headset off and on. **Please restart the headset.**
- **Bluetooth Intercom Audio Multitasking** will be activated during two-way intercom conversations with a headset that also supports this feature.
- Some GPS devices may not support this feature.
- The **Audio Multitasking** feature can be configured through the **Intercom-Audio Overlay Sensitivity** and the **Audio Overlay Volume Management** settings.

15.2.9 Intercom-Audio Overlay Sensitivity (Default: 3)

The music, FM radio and GPS volume will be lowered to play in the background if you talk over the intercom while the overlaid audio is playing. You can adjust the intercom sensitivity to activate this background audio mode. **Level 1** has the lowest sensitivity and **level 5** has the highest sensitivity.

Note: If your voice is not louder than the sensitivity of the selected level, the overlaid audio will not be lowered.

15.2.10 Audio Overlay Volume Management (Default: Disable)

The music, FM radio and GPS overlaid audio reduces in volume whenever there is an ongoing intercom conversation. If **Audio Overlay Volume Management** is enabled, the volume level of the overlaid audio will not be reduced during an intercom conversation.

15.2.11 Smart Volume Control (Default: Disable)

Enabling **Smart Volume Control** automatically changes the level of the speaker volume based on the level of the environment noise. You can enable it by setting the sensitivity to **low**, **medium** or **high**.

15.2.12 Sidetone (Default: Disable)

Sidetone is audible feedback of your own voice. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

15.2.13 Voice Prompt (Default: Enable)

You can disable **Voice Prompts** by software configuration settings, but the following voice prompts are always on.

- headset configuration settings menu, battery level indicator, speed dial, FM radio functions

15.2.14 RDS AF Setting (Default: Disable)

Radio Data System (RDS) Alternative Frequency (AF) Setting allows a receiver to re-tune to the second frequency location when the first signal becomes too weak. With RDS AF enabled on the receiver, a radio station with more than one frequency can be used.

15.2.15 FM Station Guide (Default: Enable)

When **FM Station Guide** is enabled, FM station frequencies are given by voice prompts as you select preset stations. When **FM Station Guide** is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

15.2.16 Advanced Noise Control™ (Default: Enable)

When **Advanced Noise Control** is enabled, the background noise is reduced during an intercom conversation. When it is disabled, the background noise is mixed with your voice during intercom.

15.2.17 Region Selection

You can select the proper FM frequency range for your location. Using the region setting, you can optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	$\pm$ 100 kHz
North America, South America and Australia	87.5 ~ 107.9 MHz	$\pm$ 200 kHz
Asia and Europe	87.5 ~ 108.0 MHz	$\pm$ 100 kHz
Japan	76.0 ~ 95.0 MHz	$\pm$ 100 kHz

16. TROUBLESHOOTING


Please visit oem.sena.com/icon for more troubleshooting information.

- Customer Support: oem.sena.com/icon

16.1 Fault Reset

When the headset is not working properly, you can easily reset the unit:

1. Locate the **Pinhole Fault Reset Button** below on the back of the main unit.
2. Gently insert a paper clip into the hole and press the **Pinhole Fault Reset Button** with light pressure.

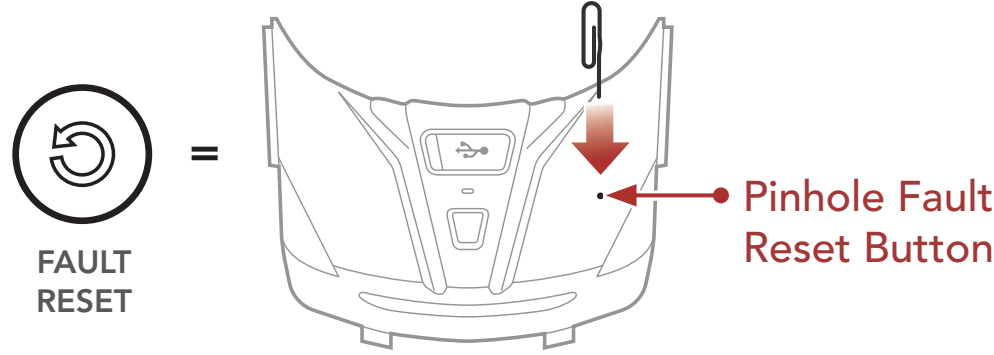

3. The headset will shut down.

Note: Fault Reset will not restore the headset to factory default settings.

16.2 Factory Reset

To erase all of your settings and start fresh, the headset can be restored to factory default settings using the **Factory Reset** feature.

1. = **HOLD 10s** → "Configuration menu"
2. = **TAP 2x** → "Factory reset"
3. = **TAP 1x** → "Headset reset, good-bye"