

# QUICK START GUIDE




**RC4**



**SCHUBERTH**

# QUICK START GUIDE

# RC4

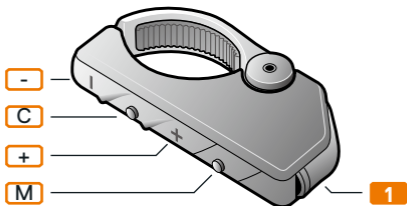


**-** Taste / Button / Bouton /  
Pulsante / Botón: -

**C** Taste / Button / Bouton /  
Pulsante / Botón: Center

**+** Taste / Button / Bouton /  
Pulsante / Botón: +


**M** Taste / Button / Bouton /  
Pulsante / Botón: Multifunction

 **1** Batterie / Battery / Batterie /  
Batteria / Batería




Entfernen / Remove /  
Retirer / Rimuovere /  
Retire

**Anbau / Installation / Installation /  
Installazione / Instalación**

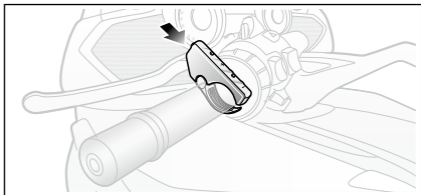

**Batterie Ersetzen / Replace Batterie  
Remplacer la batterie / Sostituire la  
batteria / Reemplazar la batería**

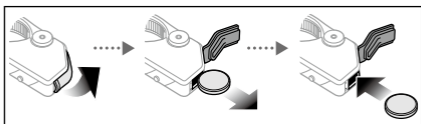

**Tastenbedienung / Button Operation  
Fonctionnement de la touche /  
Operazione dei pulsanti /  
Funcionamiento de los botones**



Antippen / Tapping / Appuyer une fois / Toccare / Pulsación



Doppelt antippen / Double Tapping /  
Double pression / Toccare due volte /  
Doble pulsación

← 1sec  
1sec Gedrückt halten / Press for 1sec / Appuyer pendant 1sec / Premere per 1sec / Presionar durante 1seg

## Einschalten / Power On / Marche / Accensione / Encendido



Batterie / Batterie / Batterie / Batteria / Batería



LED

70 ~ 100% ■■■■

 
30 ~ 70% ■■■

0 ~ 30% ■■

## Ausschalten / Power Off / Arrêt / Spegnimento / Apagado



## Koppeln / Pairing / Couplage / Accoppiamento / Emparejamiento



Headset



8sec



Remote Control Pairing

## Reset

 &  &   1sec

## Specifications

- Operating time: up to 5 months
- Operating temperature: -10°C ~ 55°C (14°F ~ 131°F)
- Water resistant
- Battery Type: CR2016 lithium coin battery  
Voltage: 3V